
1969 AMC AMBASSADOR

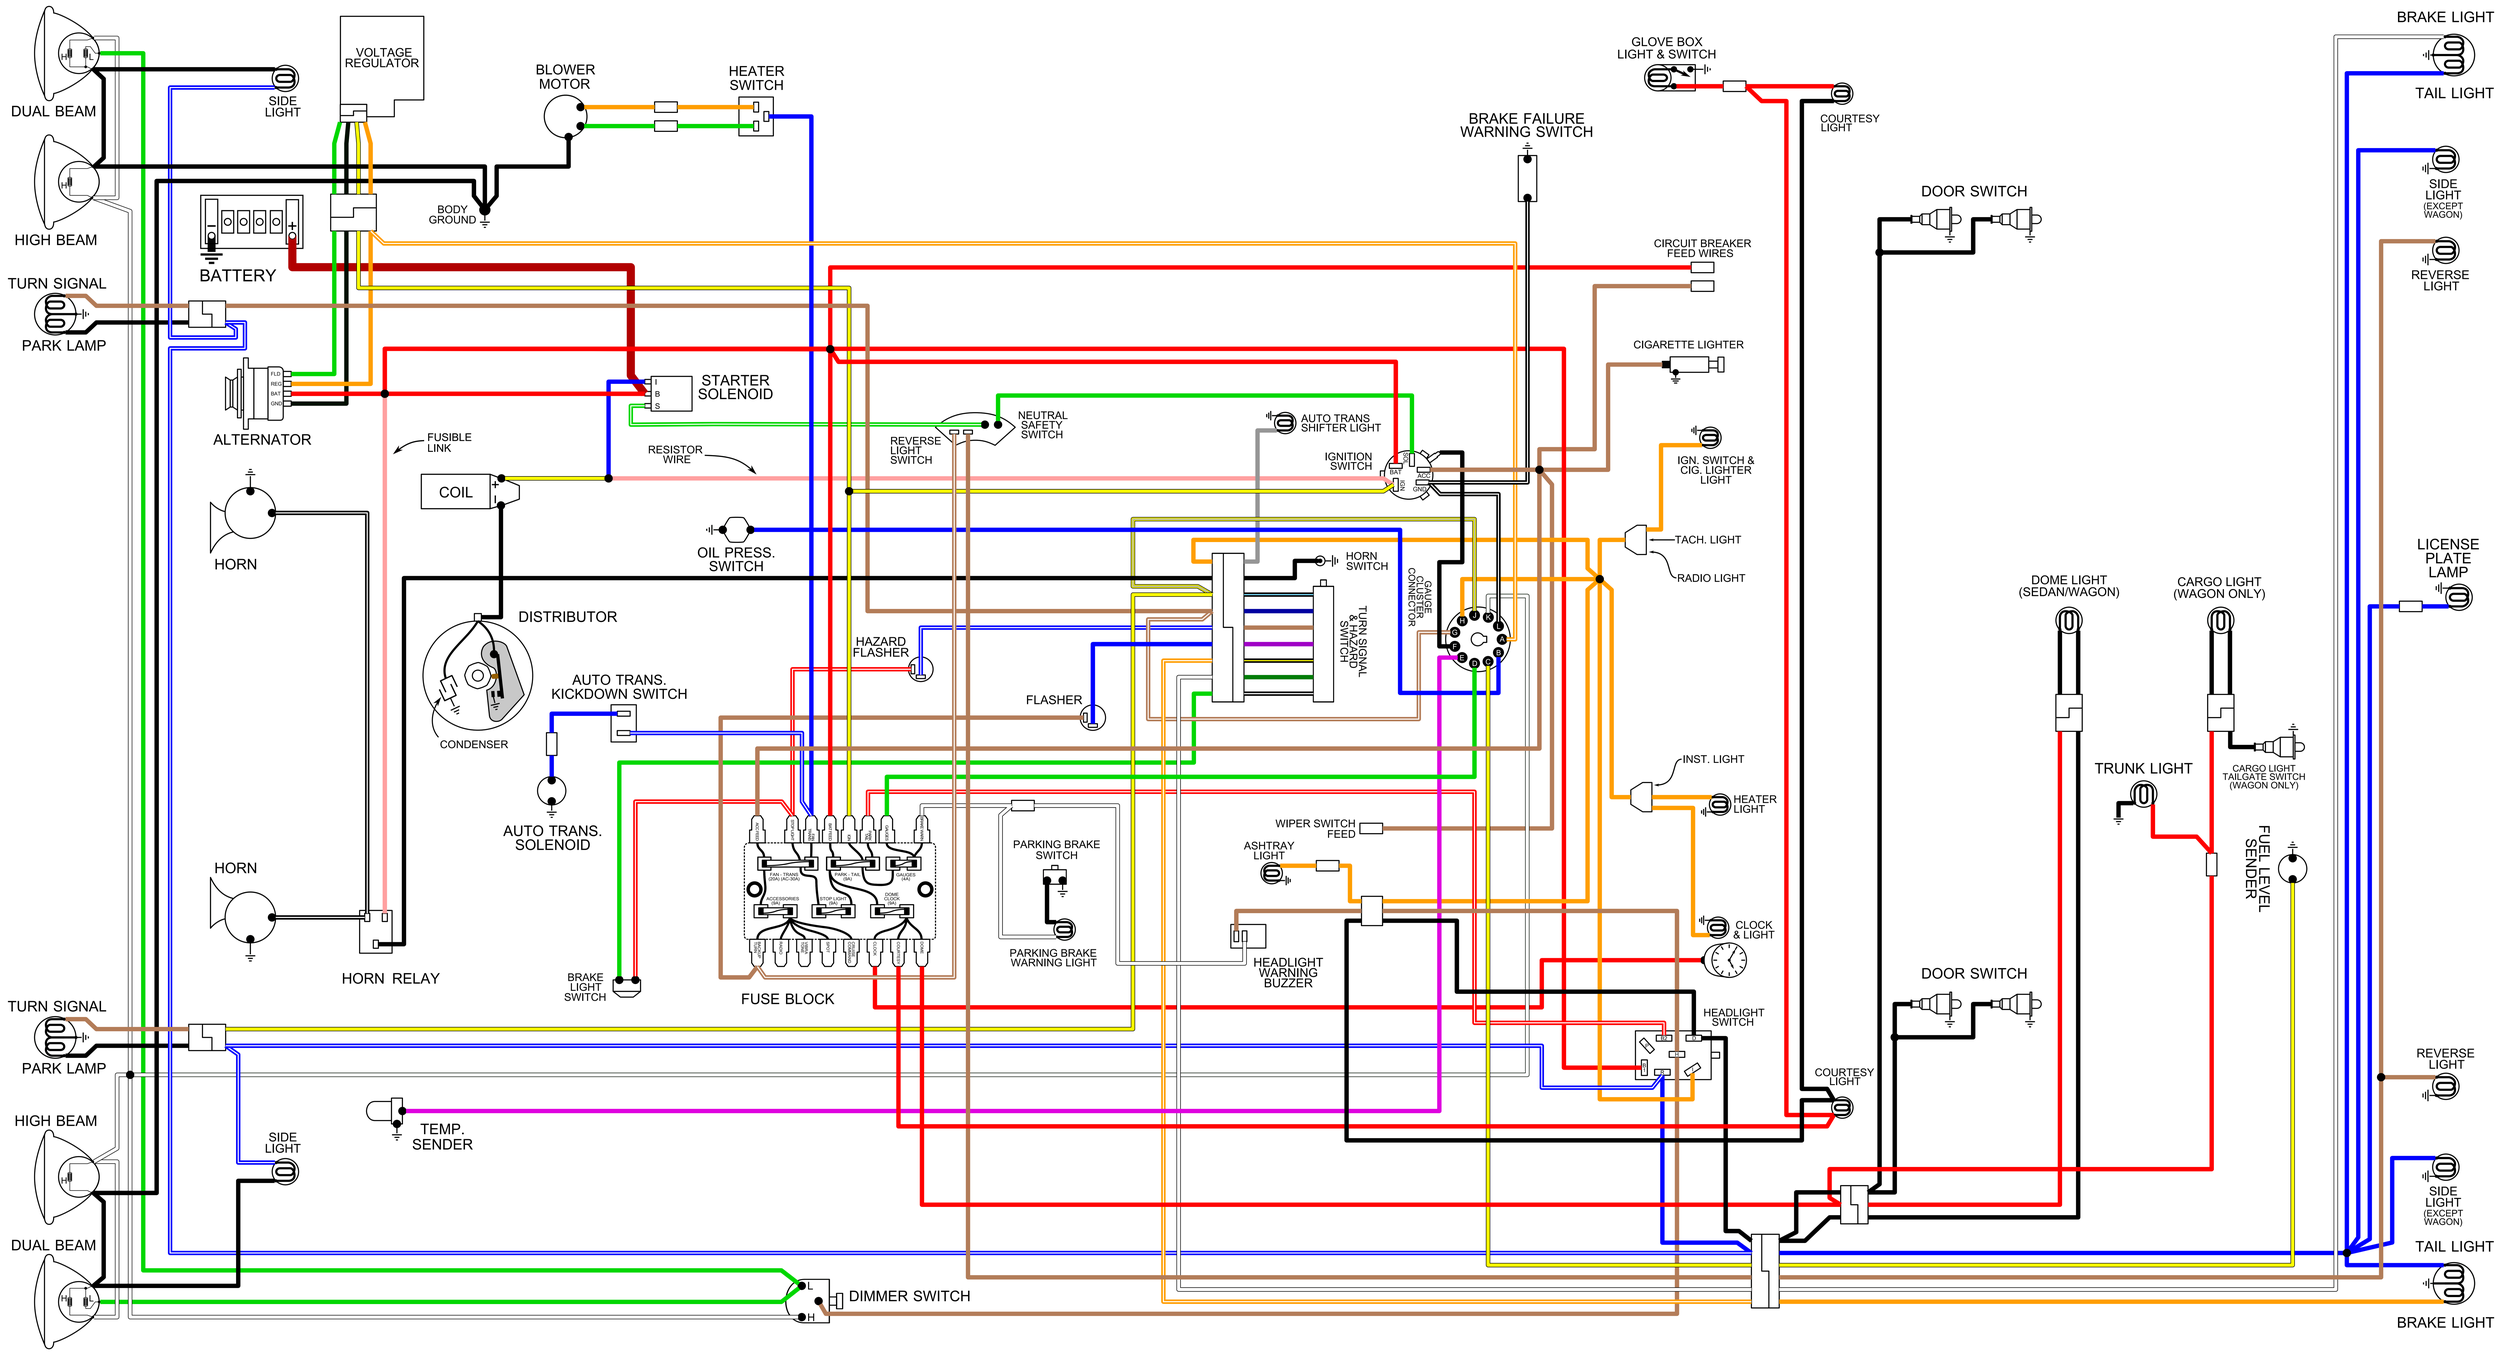


CINCO

1969 AMC AMBASSADOR
MAIN POWER

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
FUSIBLE LINK
COIL
HORN
OIL PRESS. SWITCH
STARTER SOLENOID
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
GAUGE CLUSTER CONNECTOR
TURN SIGNAL & HAZARD SWITCH
HAZARD FLASHER
FLASHER
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
DOOR SWITCH
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT (EXCEPT WAGON)
REVERSE LIGHT
LICENSE PLATE LAMP
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
TRUNK LIGHT
FUEL LEVEL SENDER
HEATER LIGHT
CLOCK & LIGHT
HEADLIGHT SWITCH
WIPER SWITCH FEED
ASHTRAY LIGHT
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
HEADLIGHT WARNING BUZZER
FUSE BLOCK
BRAKE LIGHT SWITCH
HORN RELAY
HORN
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER
DIMMER SWITCH
DOOR SWITCH
COURTESY LIGHT
REVERSE LIGHT
SIDE LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT


CINCO

1969 AMC AMBASSADOR
ACCESSORY POWER

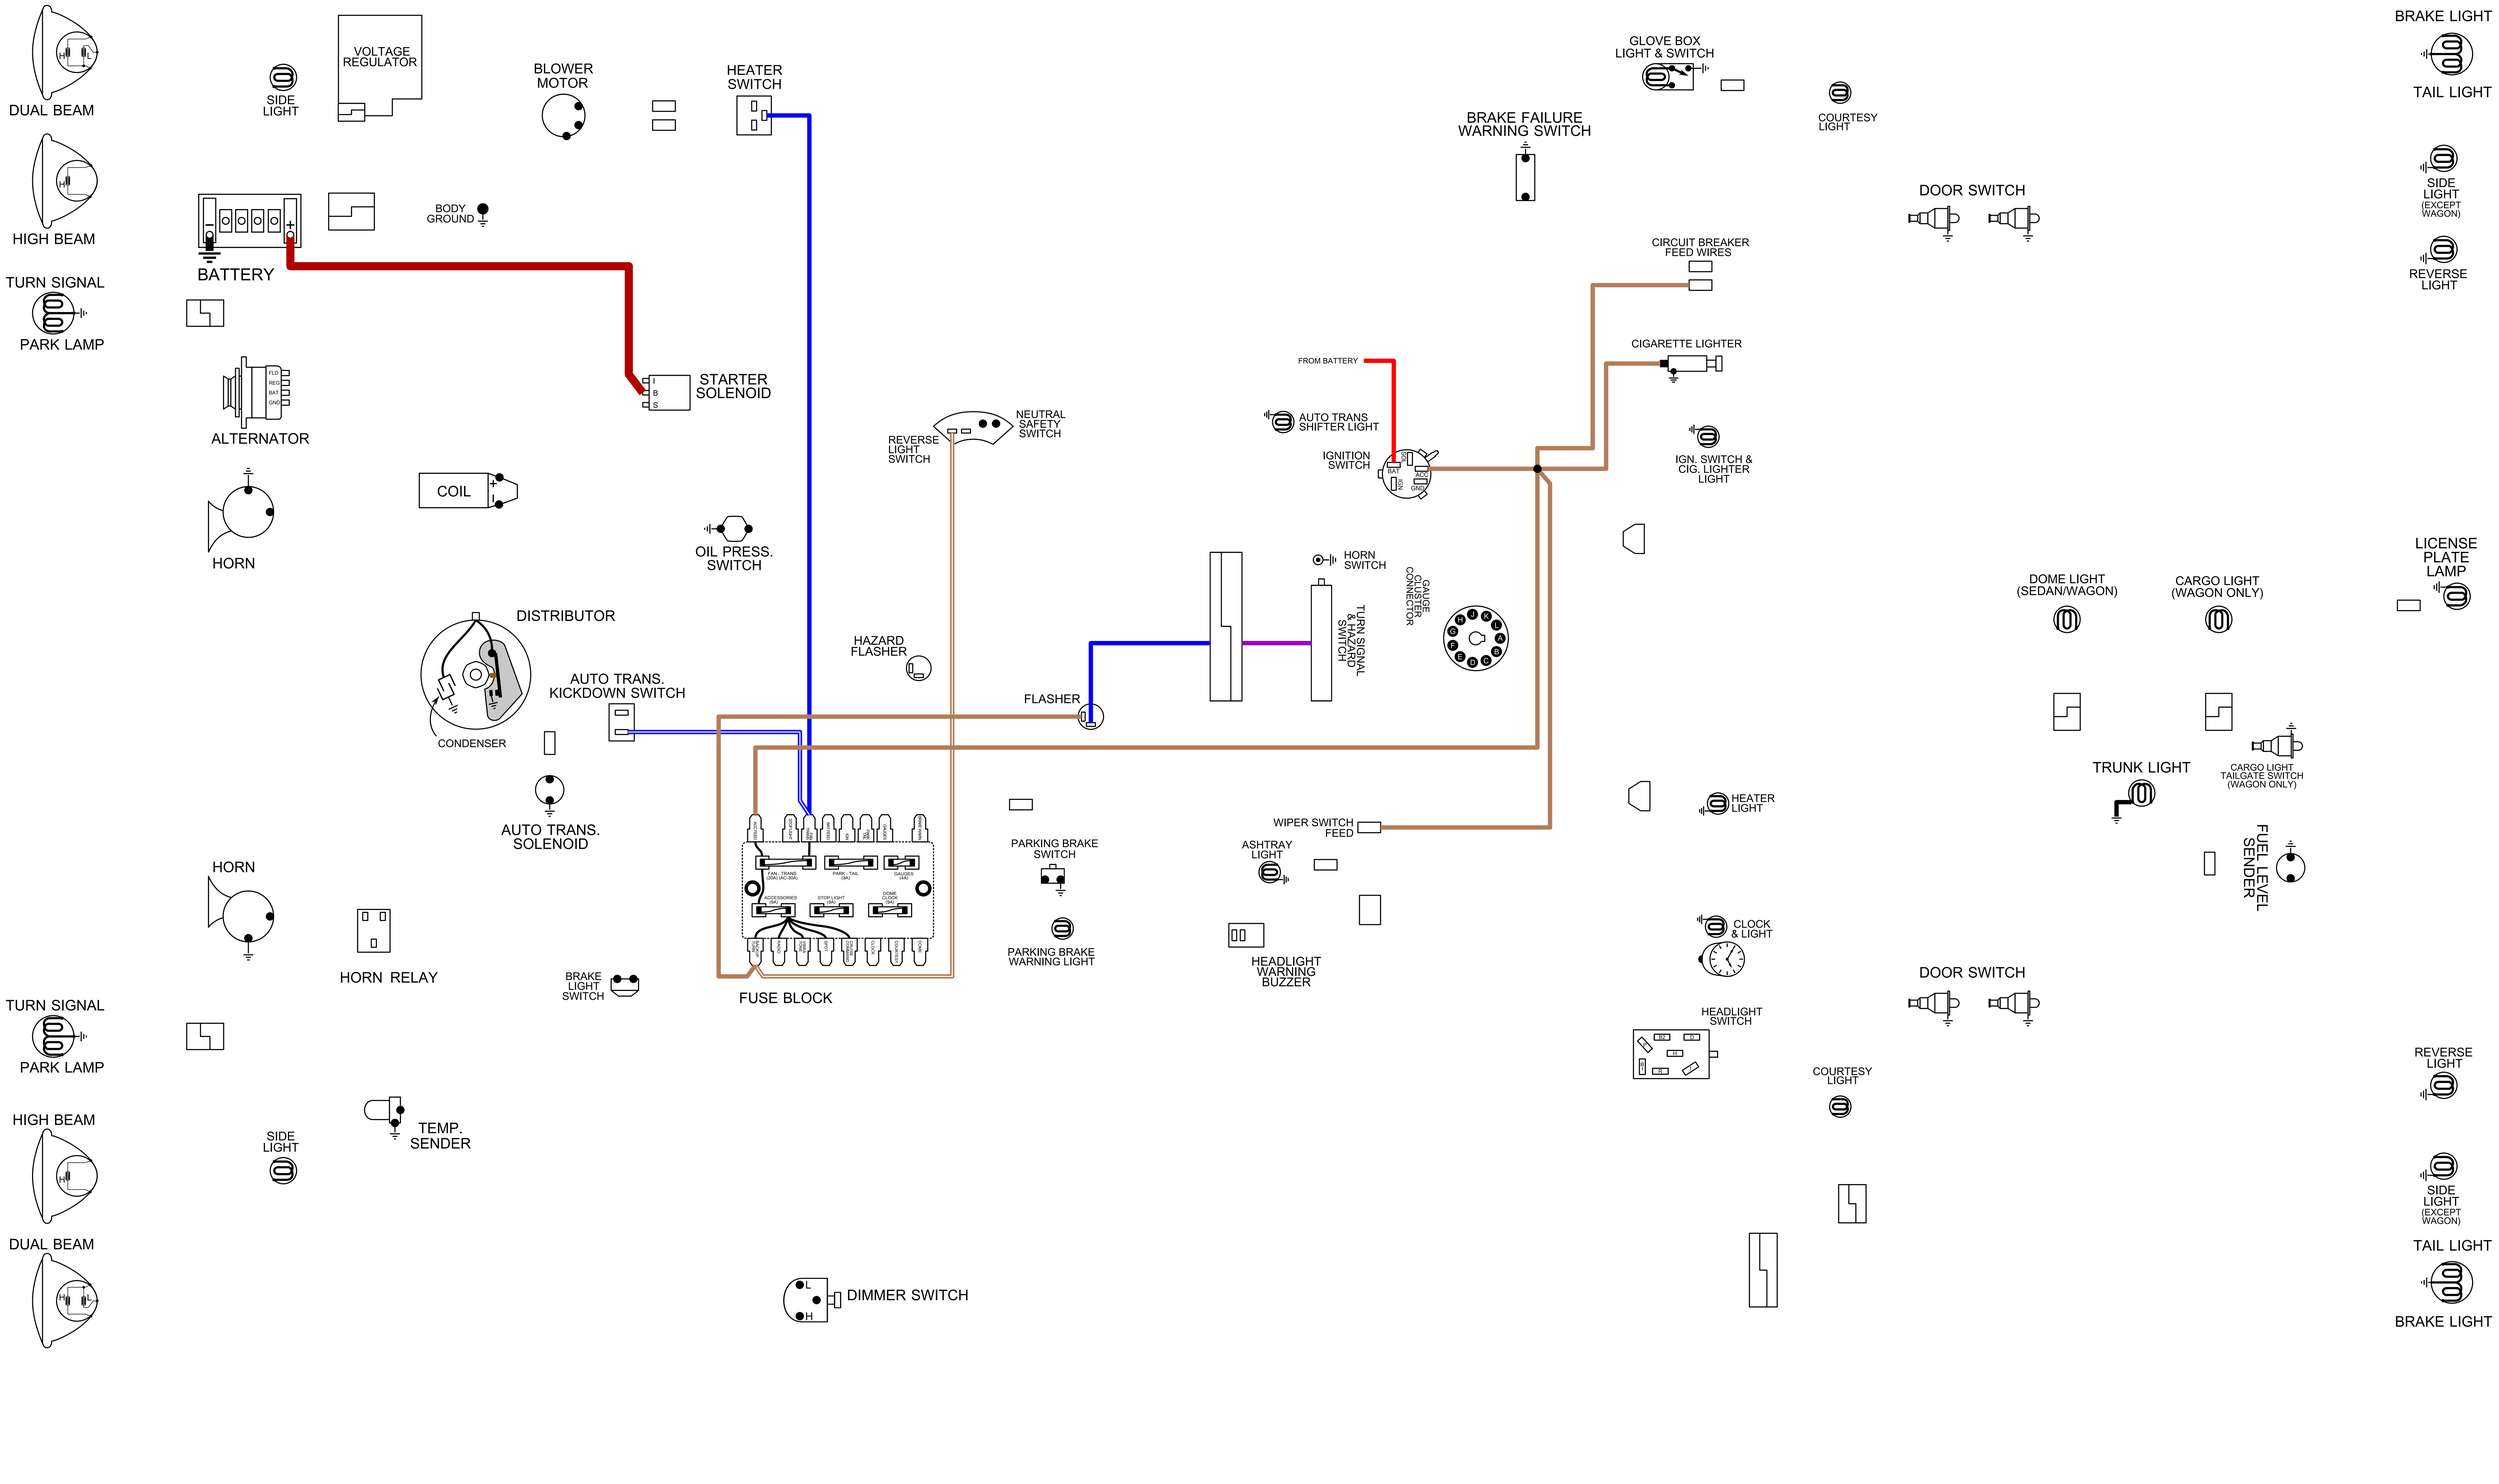


CINCO

1969 AMC AMBASSADOR
IGNITION SYSTEM

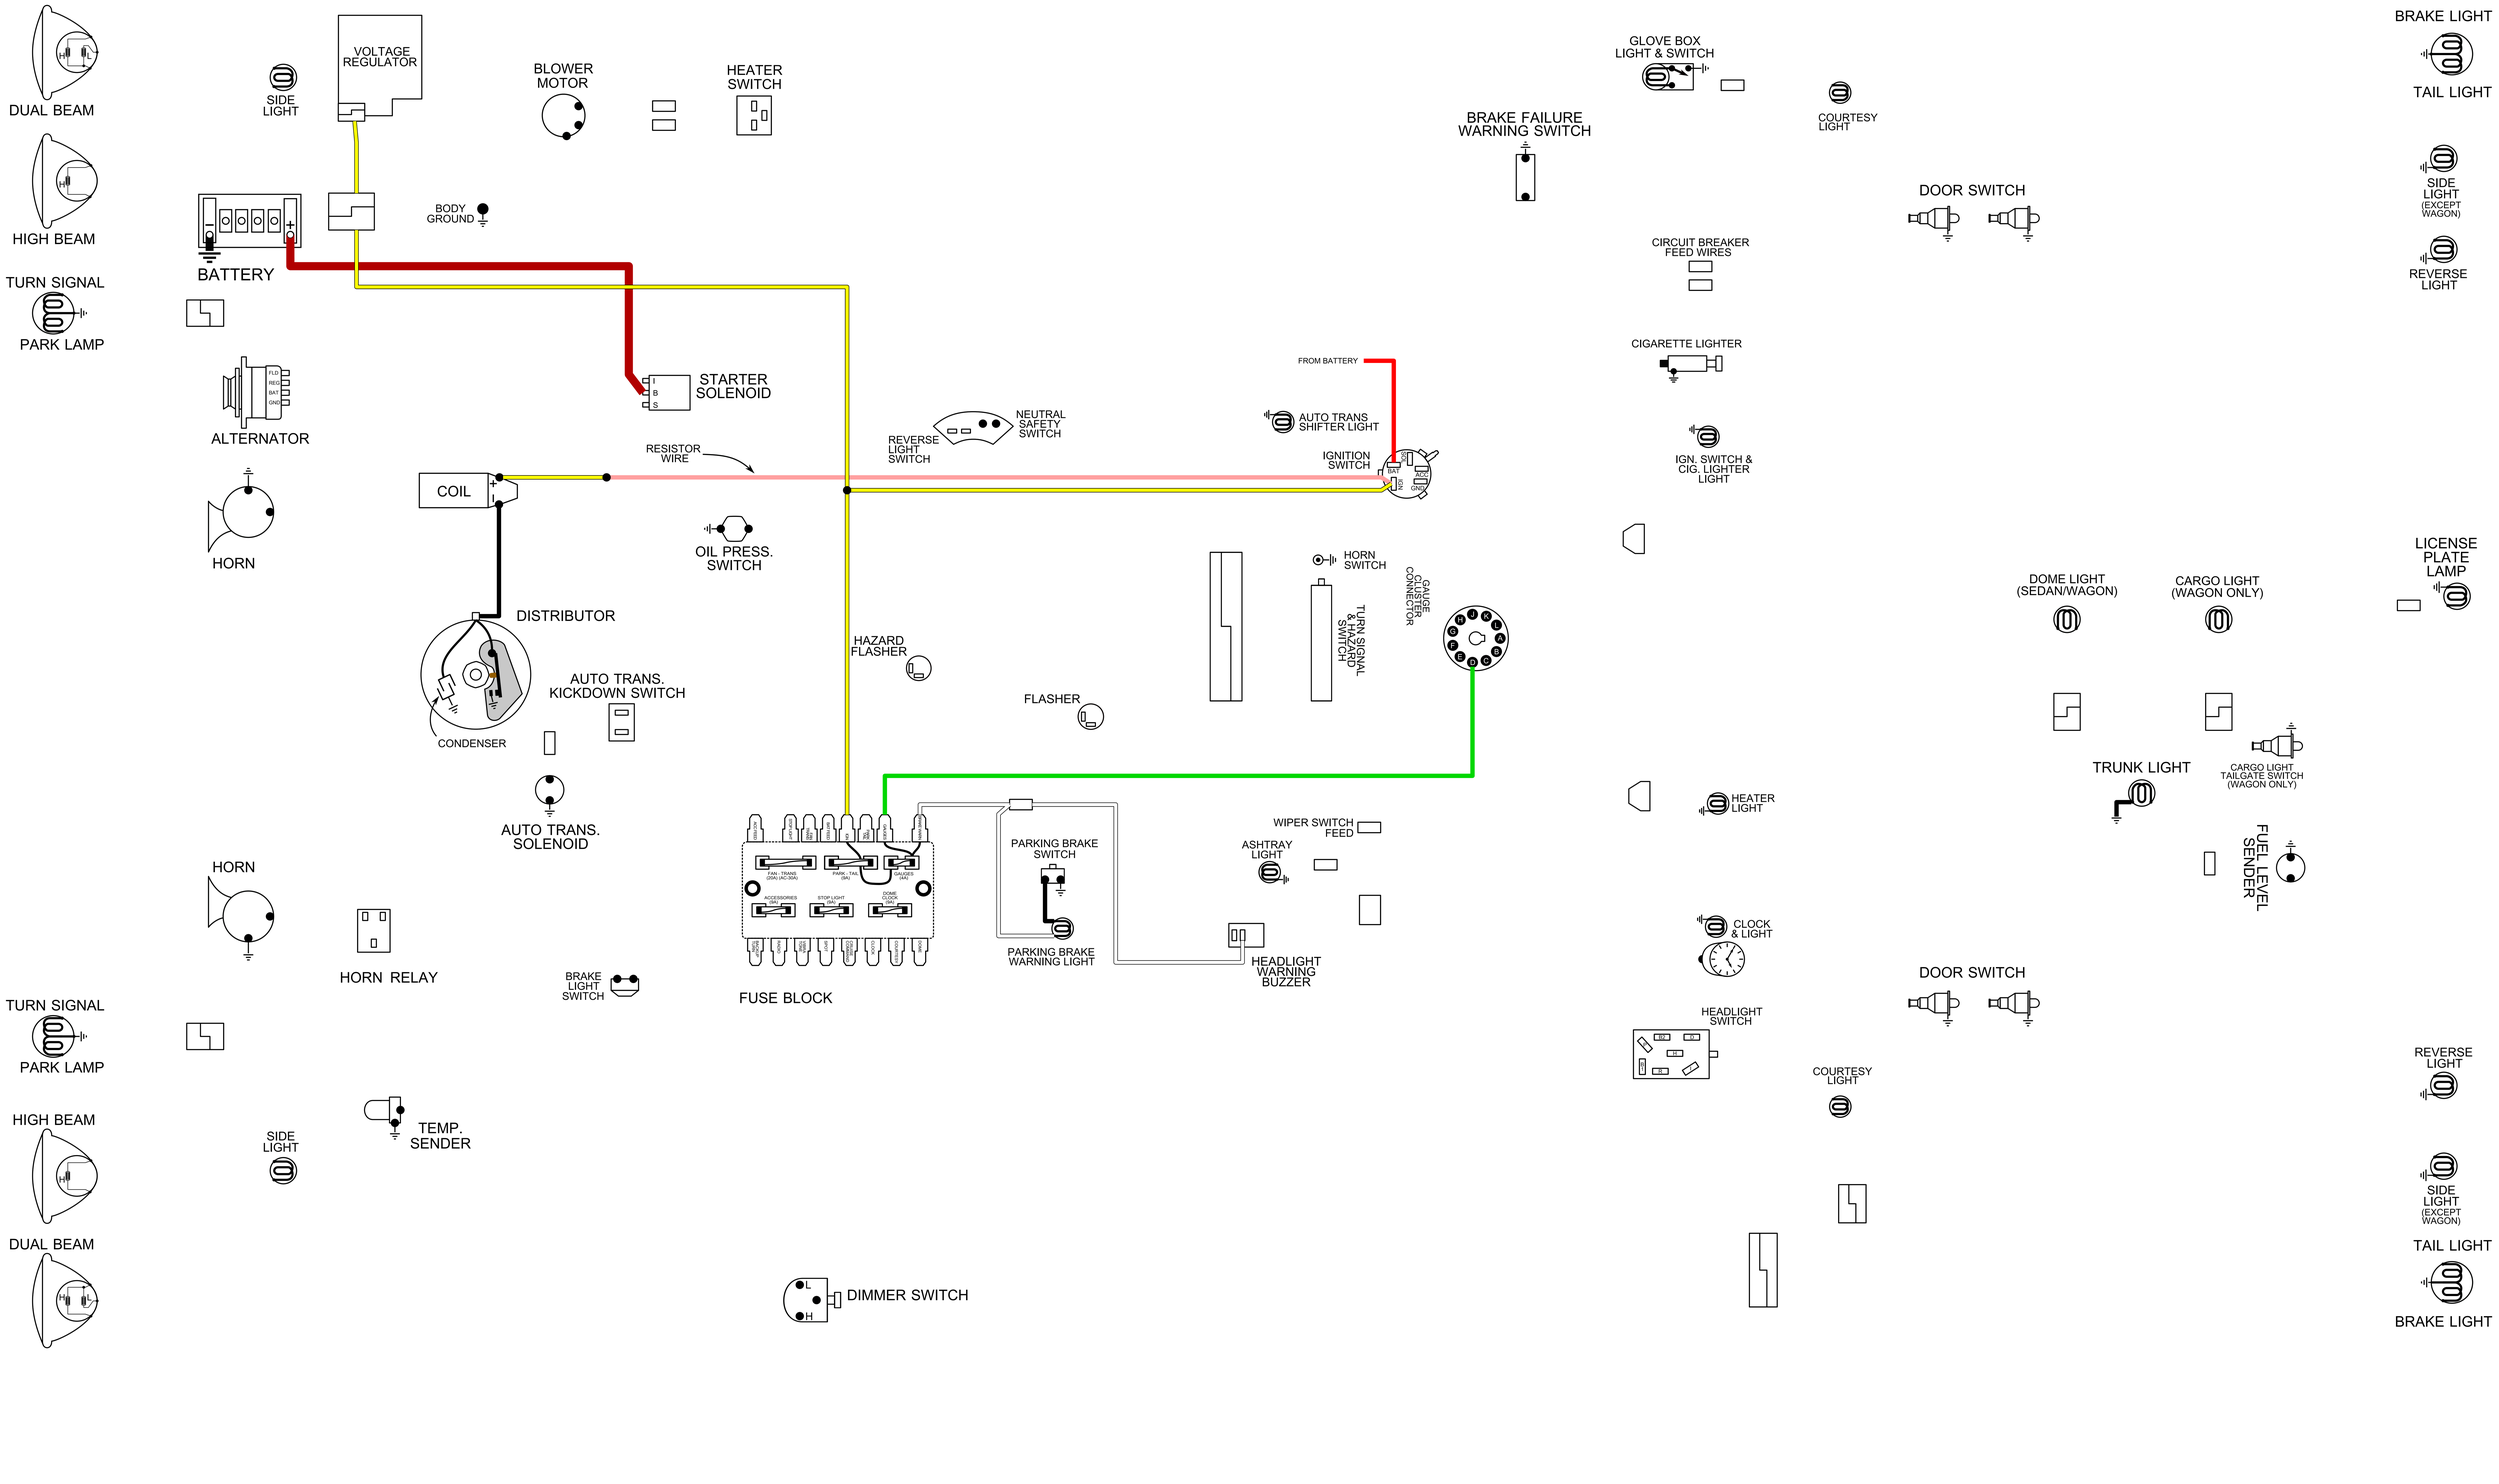


CINCO

1969 AMC AMBASSADOR
STARTING SYSTEM

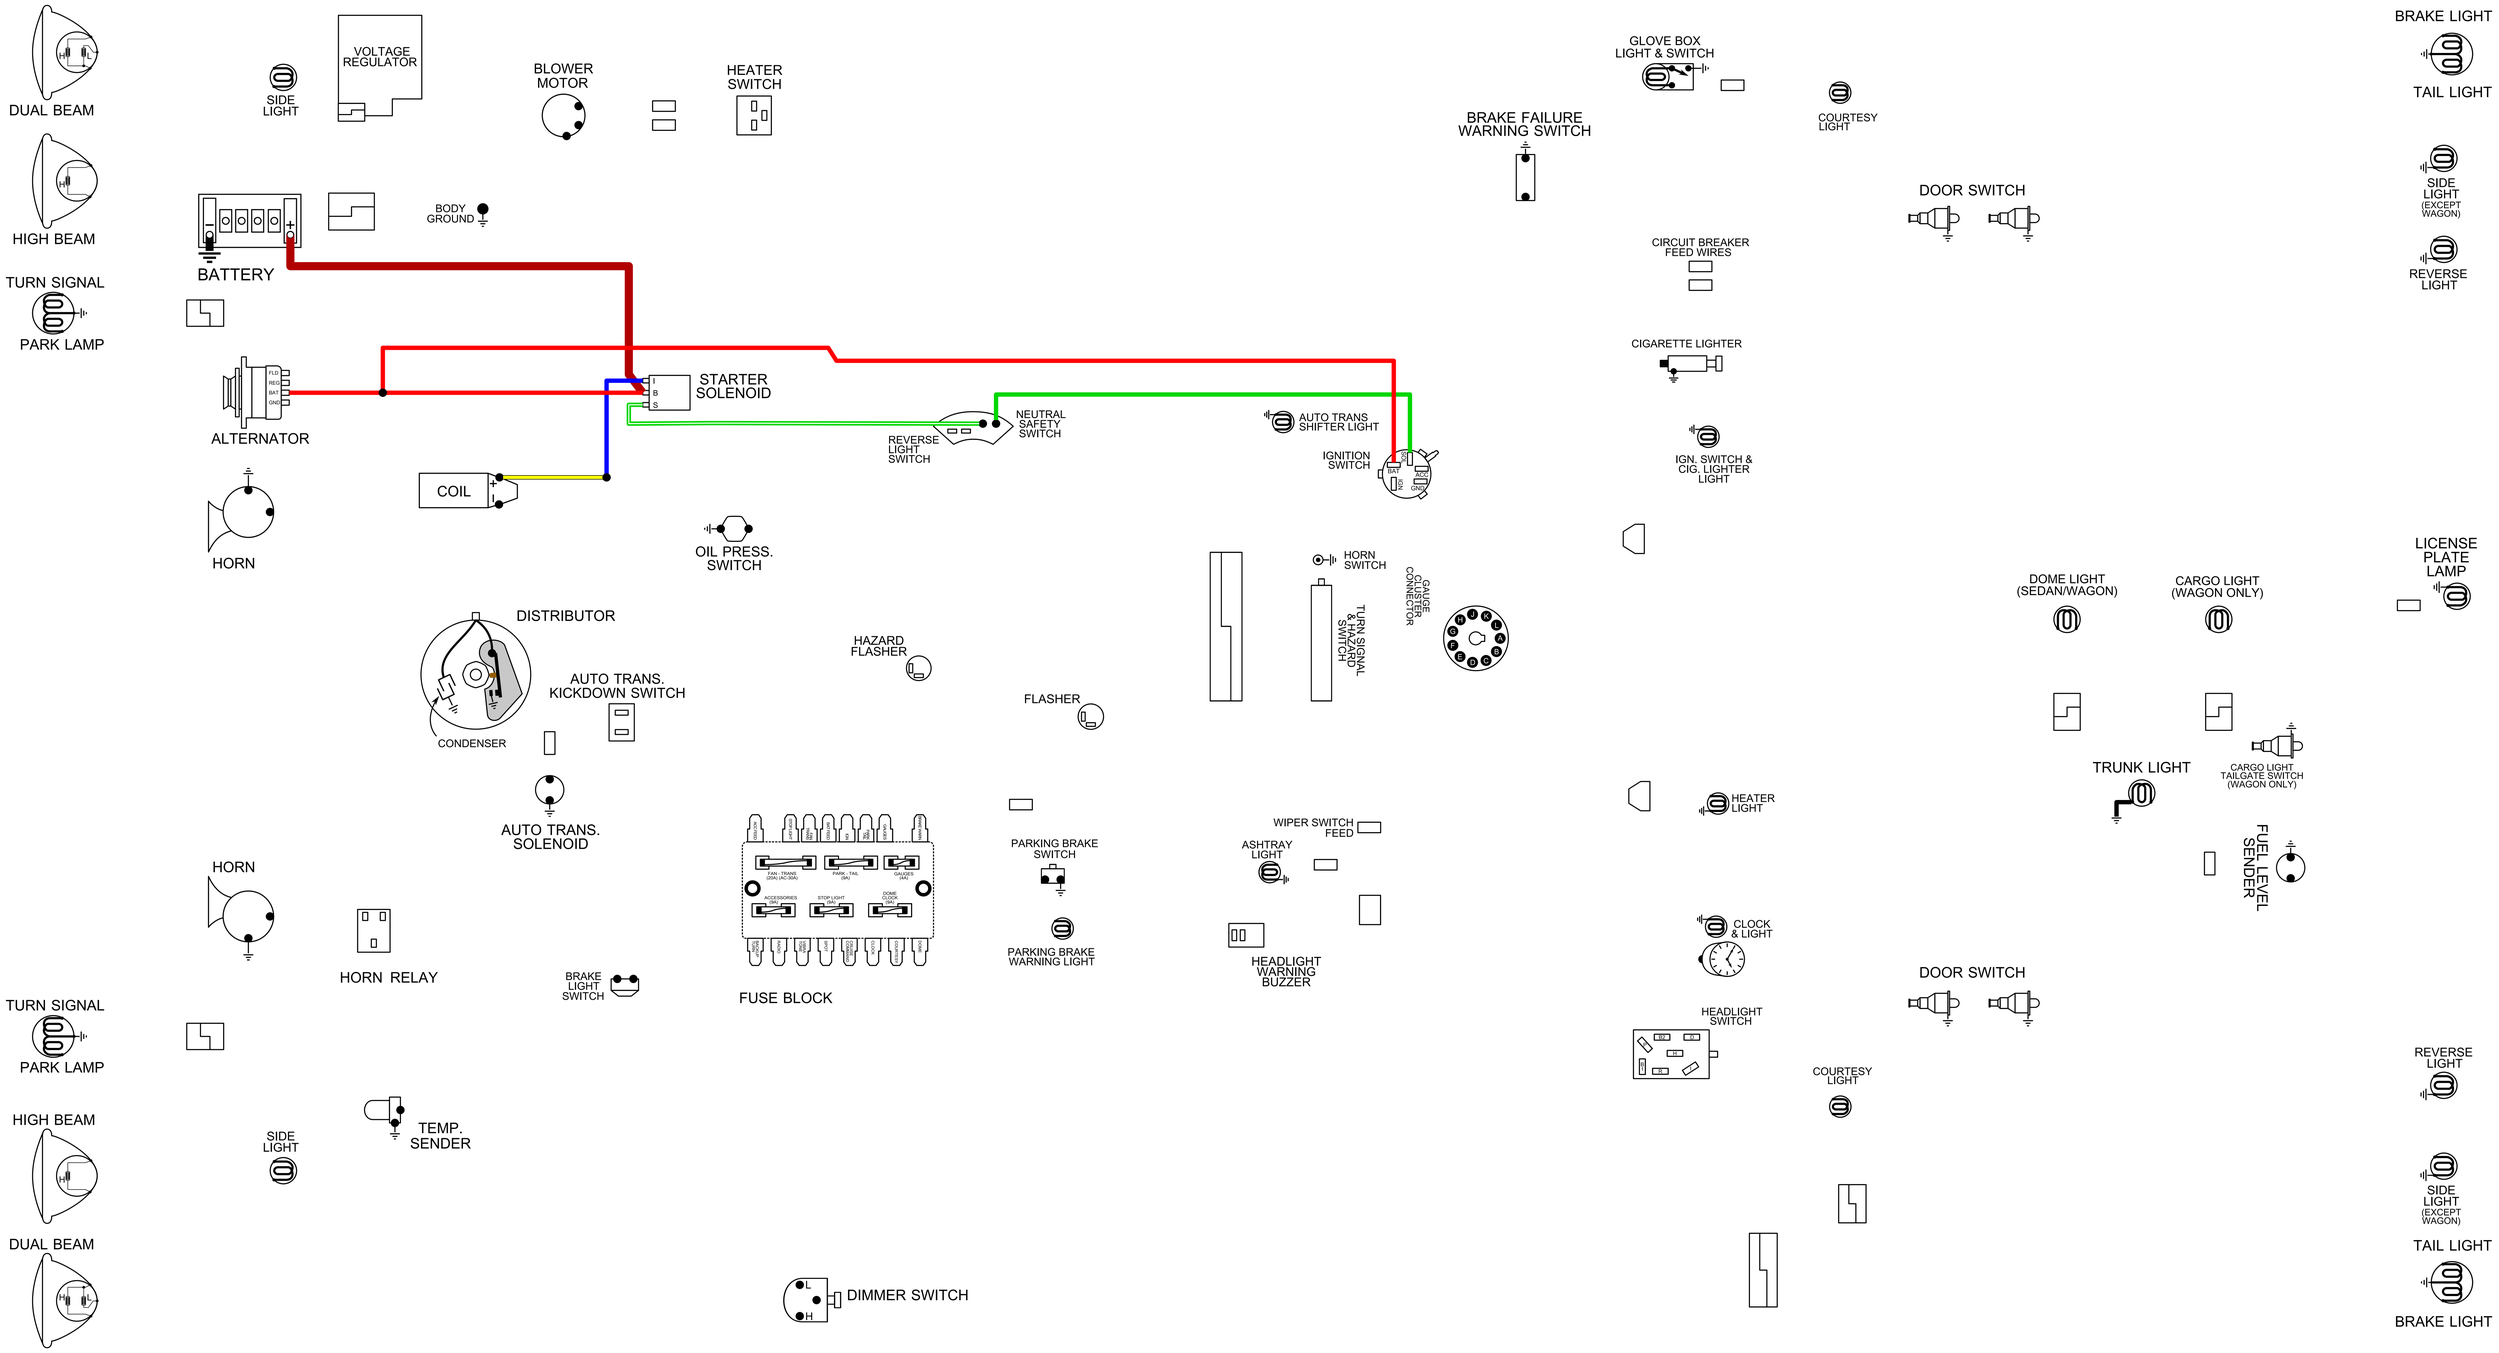


CINCO

1969 AMC AMBASSADOR
CHARGING SYSTEM

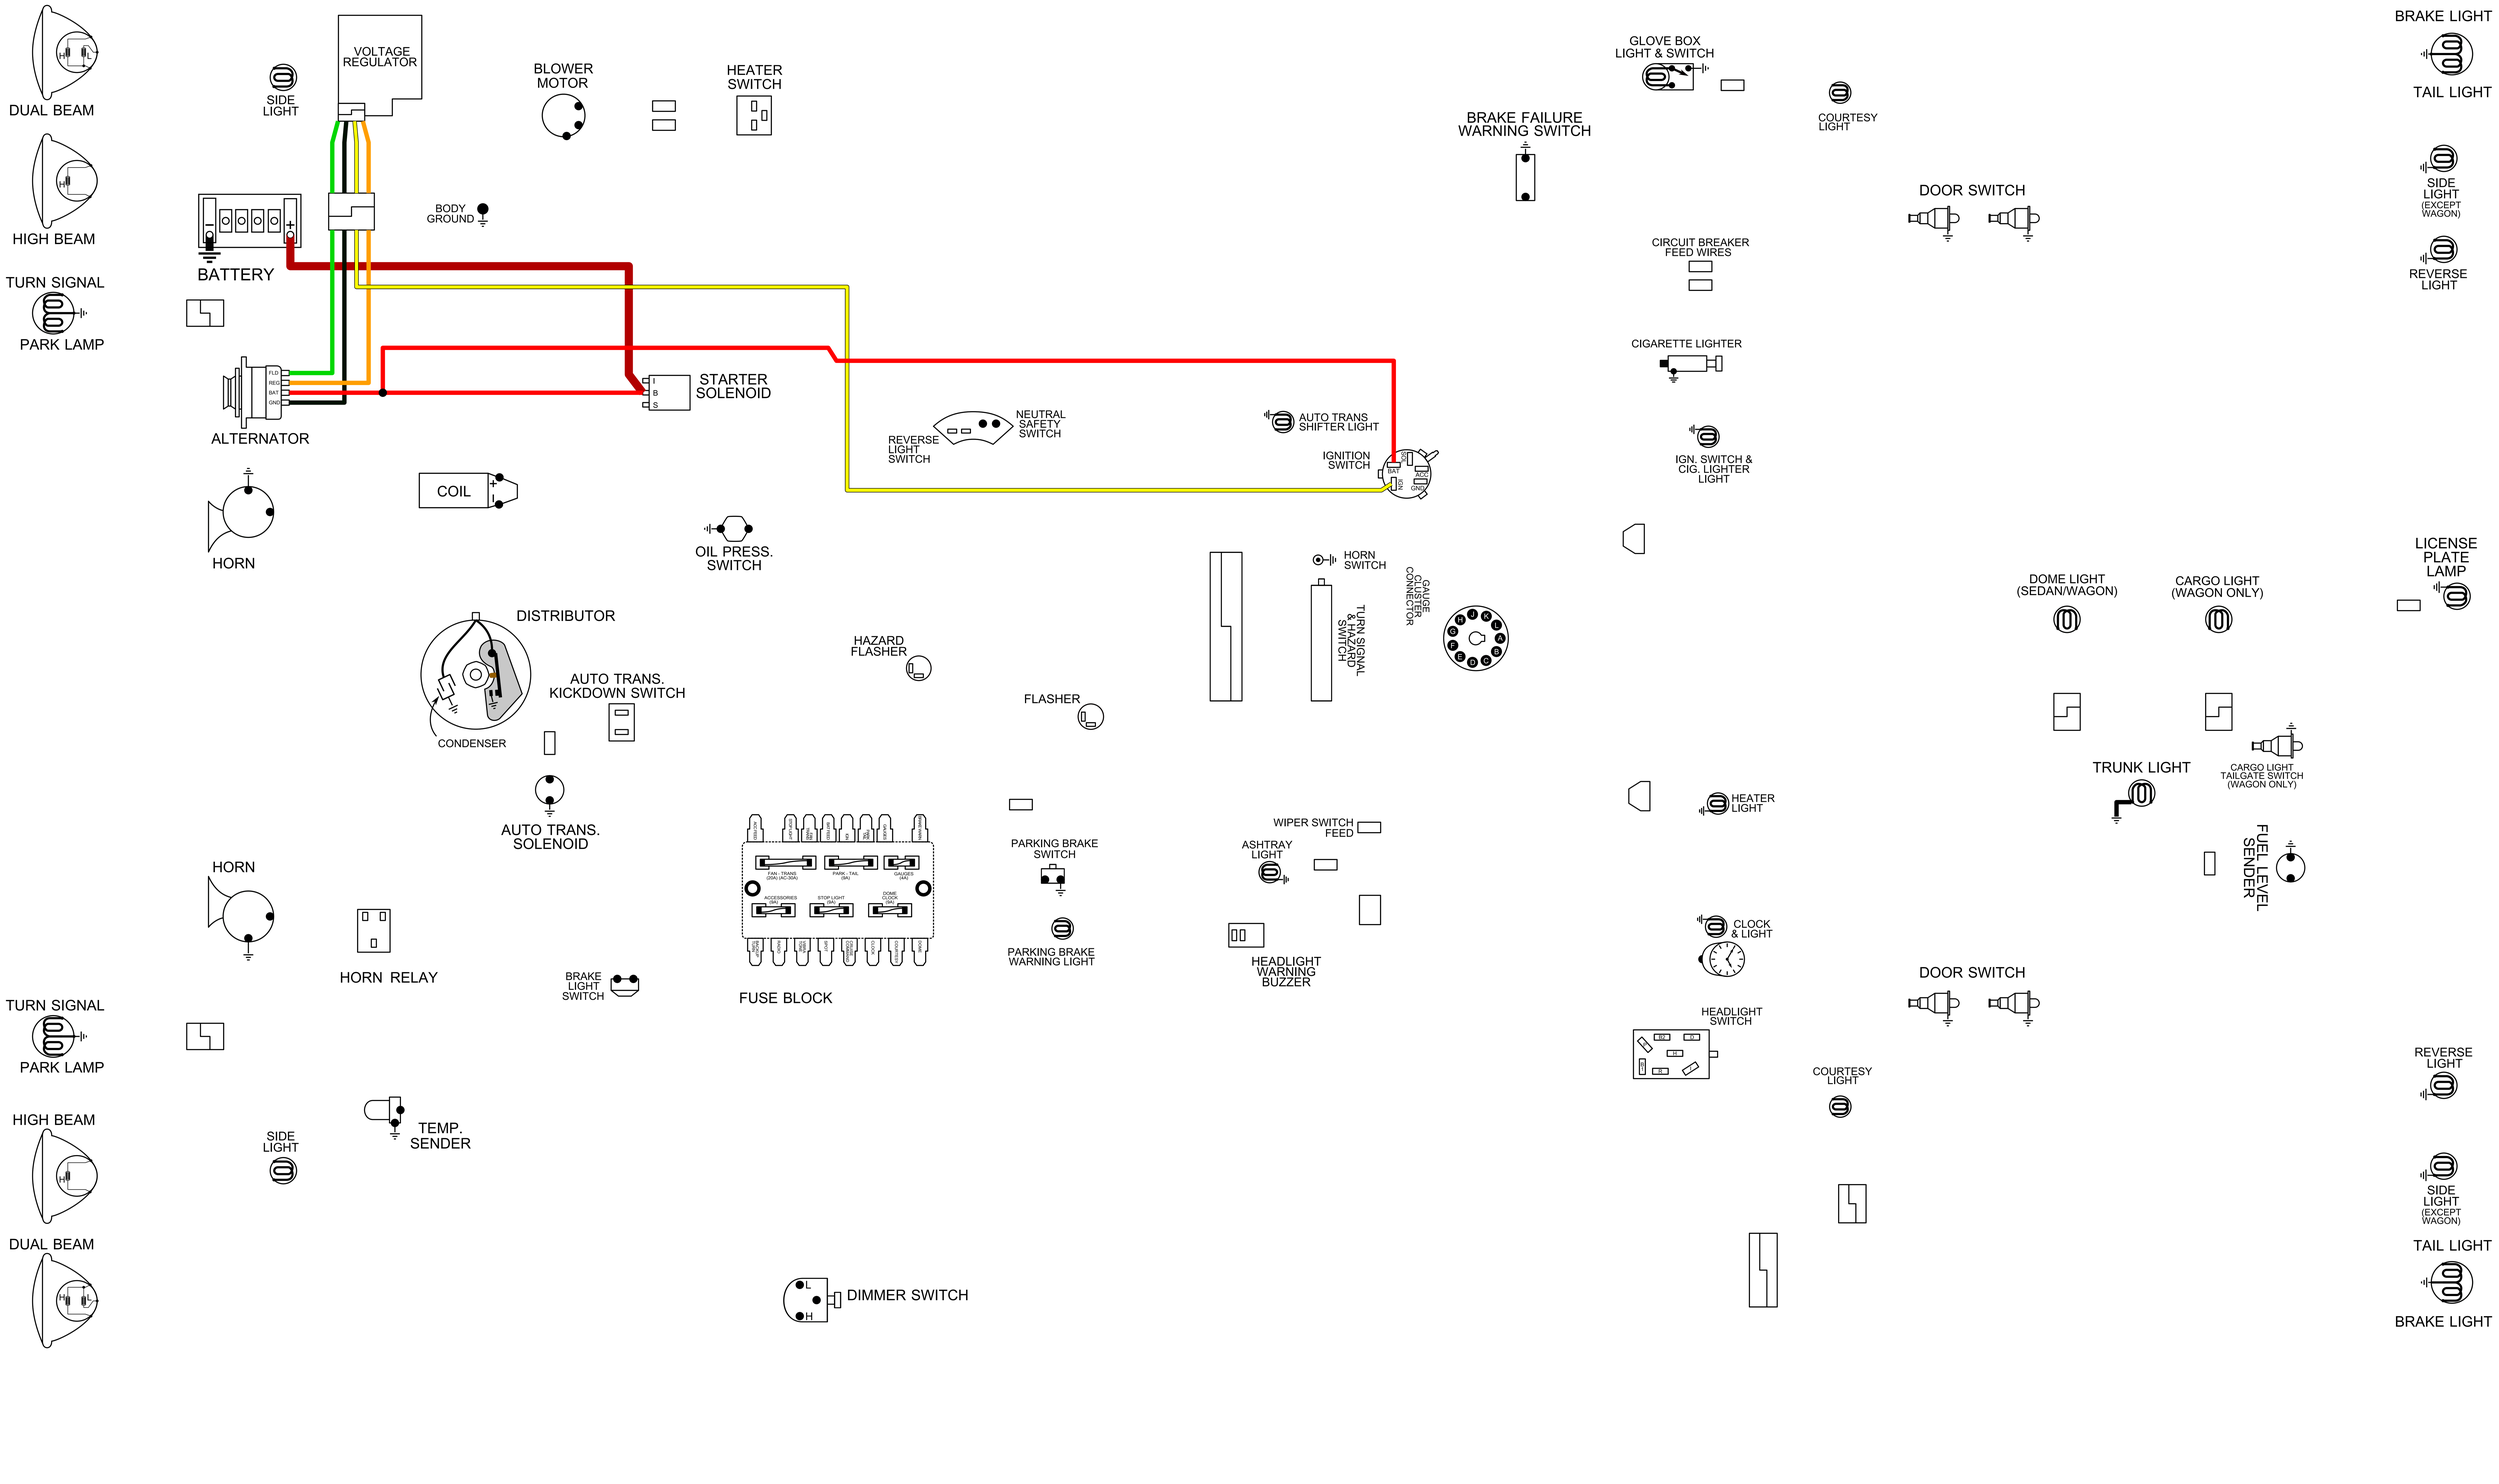


CINCO

1969 AMC AMBASSADOR
HEADLIGHTS

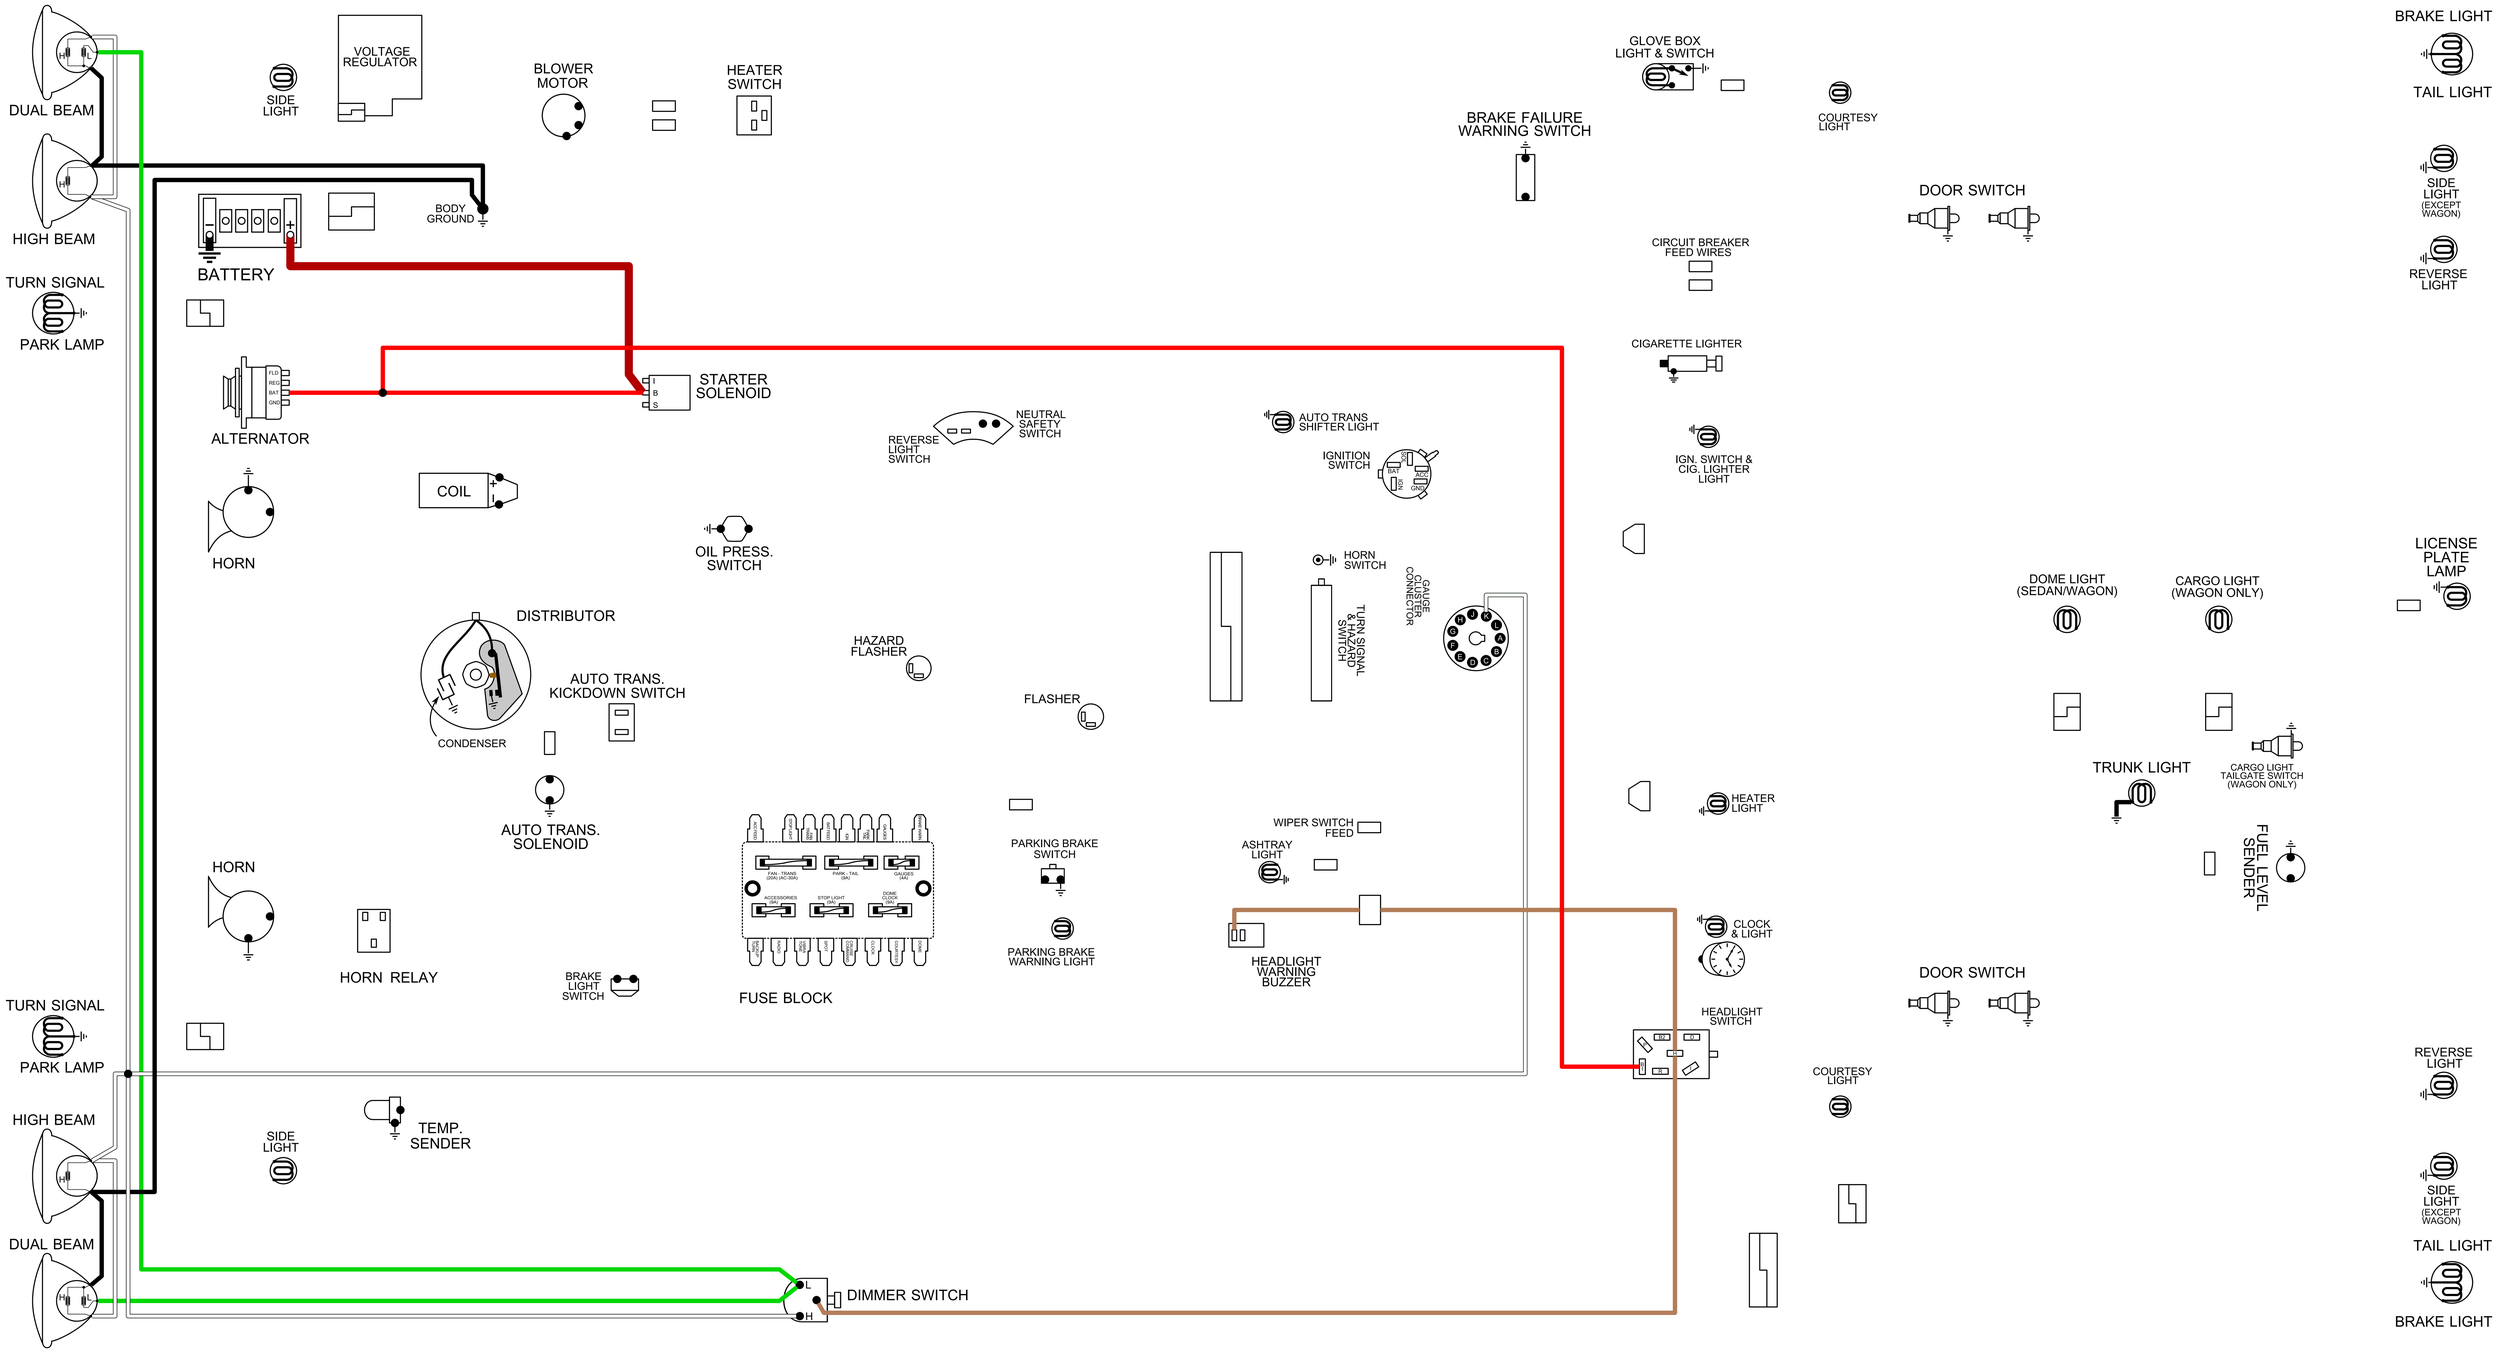

CINCO

1969 AMC AMBASSADOR
RUNNING LIGHTS

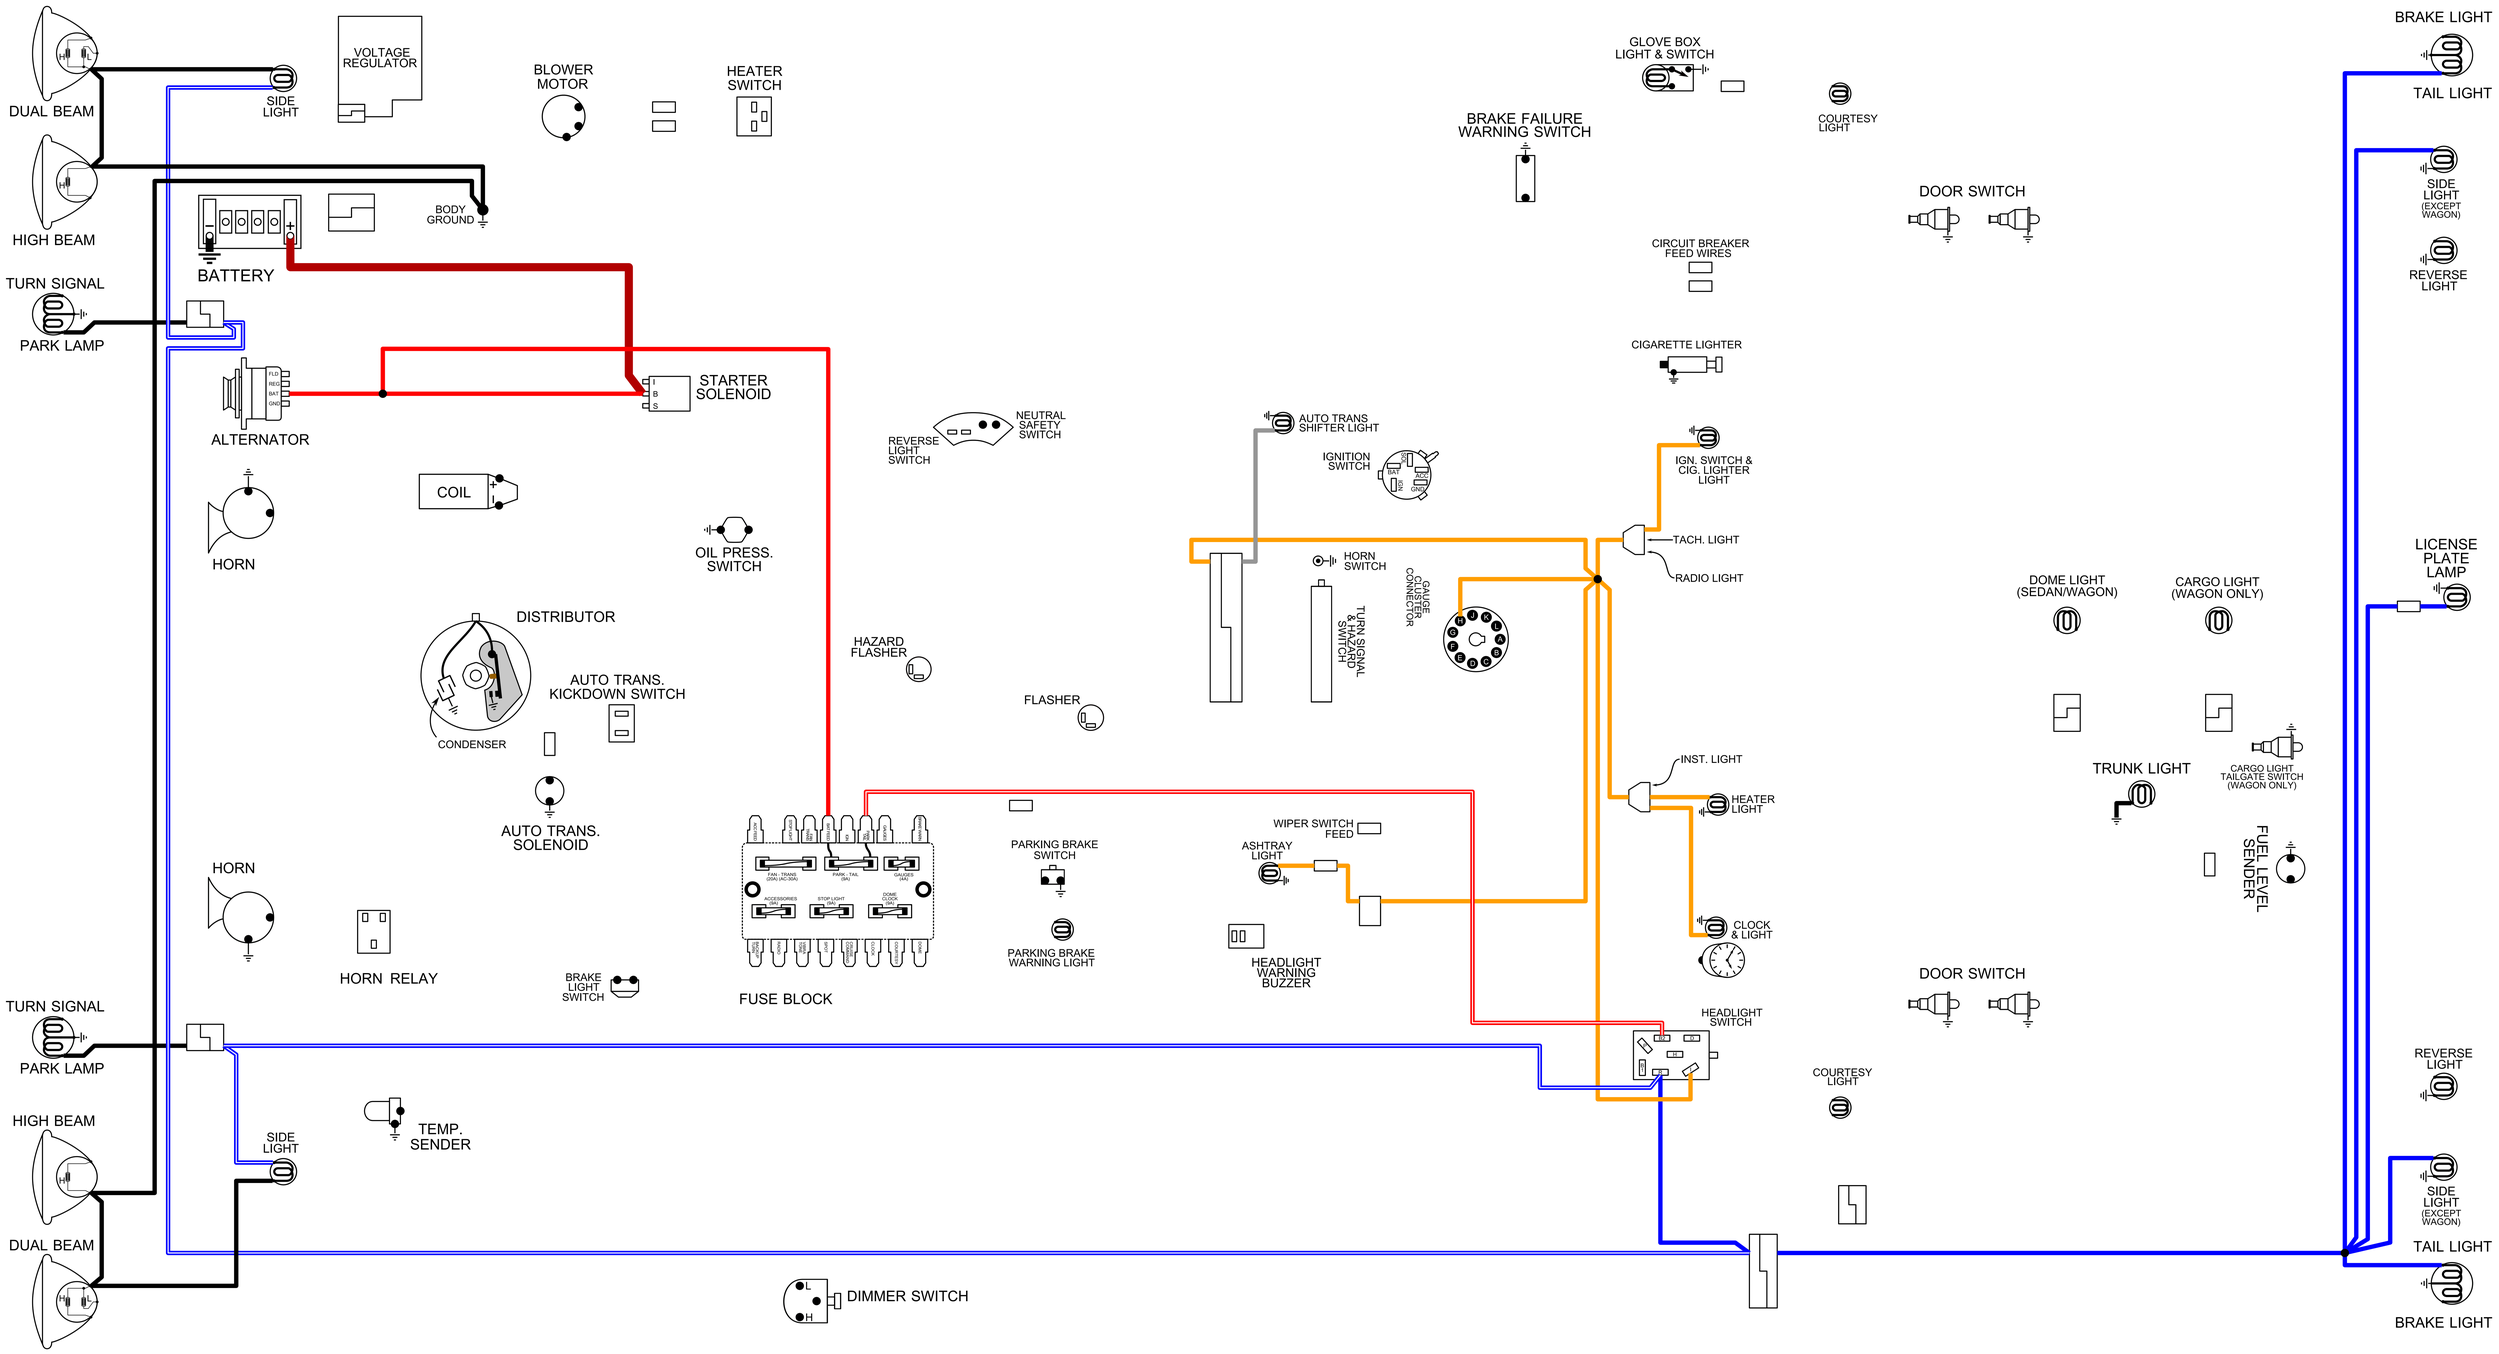

CINCO

1969 AMC AMBASSADOR
BRAKE LIGHTS

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
STARTER SOLENOID
COIL
HORN
OIL PRESS. SWITCH
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
HAZARD FLASHER
FLASHER
BRAKE LIGHT SWITCH
FUSE BLOCK
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
GAUGE CLUSTER CONNECTOR
TURN SIGNAL & HAZARD SWITCH
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
WIPER SWITCH FEED
ASHTRAY LIGHT
HEADLIGHT WARNING BUZZER
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
DOOR SWITCH
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
HEATER LIGHT
CLOCK & LIGHT
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
TRUNK LIGHT
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
FUEL LEVEL SENDER
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT (EXCEPT WAGON)
REVERSE LIGHT
LICENSE PLATE LAMP
HORN
HORN RELAY
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER
DIMMER SWITCH
REVERSE LIGHT
SIDE LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT

CINCO

1969 AMC AMBASSADOR
TURN SIGNALS

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
STARTER SOLENOID
COIL
HORN
OIL PRESS. SWITCH
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
HORN
HORN RELAY
BRAKE LIGHT SWITCH
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
HAZARD FLASHER
FLASHER
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
DIMMER SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
GAUGE CLUSTER CONNECTOR
TURN SIGNAL & HAZARD SWITCH
WIPER SWITCH FEED
ASHTRAY LIGHT
HEADLIGHT WARNING BUZZER
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
DOOR SWITCH
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
HEATER LIGHT
CLOCK & LIGHT
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
TRUNK LIGHT
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
FUEL LEVEL SENDER
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT (EXCEPT WAGON)
REVERSE LIGHT
LICENSE PLATE LAMP
SIDE LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT

CINCO

1969 AMC AMBASSADOR
HEATER

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
STARTER SOLENOID
COIL
HORN
OIL PRESS. SWITCH
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
HORN
HORN RELAY
BRAKE LIGHT SWITCH
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
HAZARD FLASHER
FLASHER
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
DIMMER SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
WIPER SWITCH FEED
ASHTRAY LIGHT
HEADLIGHT WARNING BUZZER
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
DOOR SWITCH
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
HEATER LIGHT
CLOCK & LIGHT
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT (EXCEPT WAGON)
REVERSE LIGHT
LICENSE PLATE LAMP
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
TRUNK LIGHT
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
FUEL LEVEL SENDER
SIDE LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT


CINCO

1969 AMC AMBASSADOR
HORN

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
STARTER SOLENOID
FUSIBLE LINK
COIL
HORN
OIL PRESS. SWITCH
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
HORN
HORN RELAY
BRAKE LIGHT SWITCH
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
HAZARD FLASHER
FLASHER
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
WIPER SWITCH FEED
ASHTRAY LIGHT
HEADLIGHT WARNING BUZZER
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
DOOR SWITCH
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT (EXCEPT WAGON)
REVERSE LIGHT
LICENSE PLATE LAMP
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
TRUNK LIGHT
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
FUEL LEVEL SENDER
HEATER LIGHT
CLOCK & LIGHT
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
REVERSE LIGHT
SIDE LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER
DIMMER SWITCH


CINCO

1969 AMC AMBASSADOR
TRANSMISSION

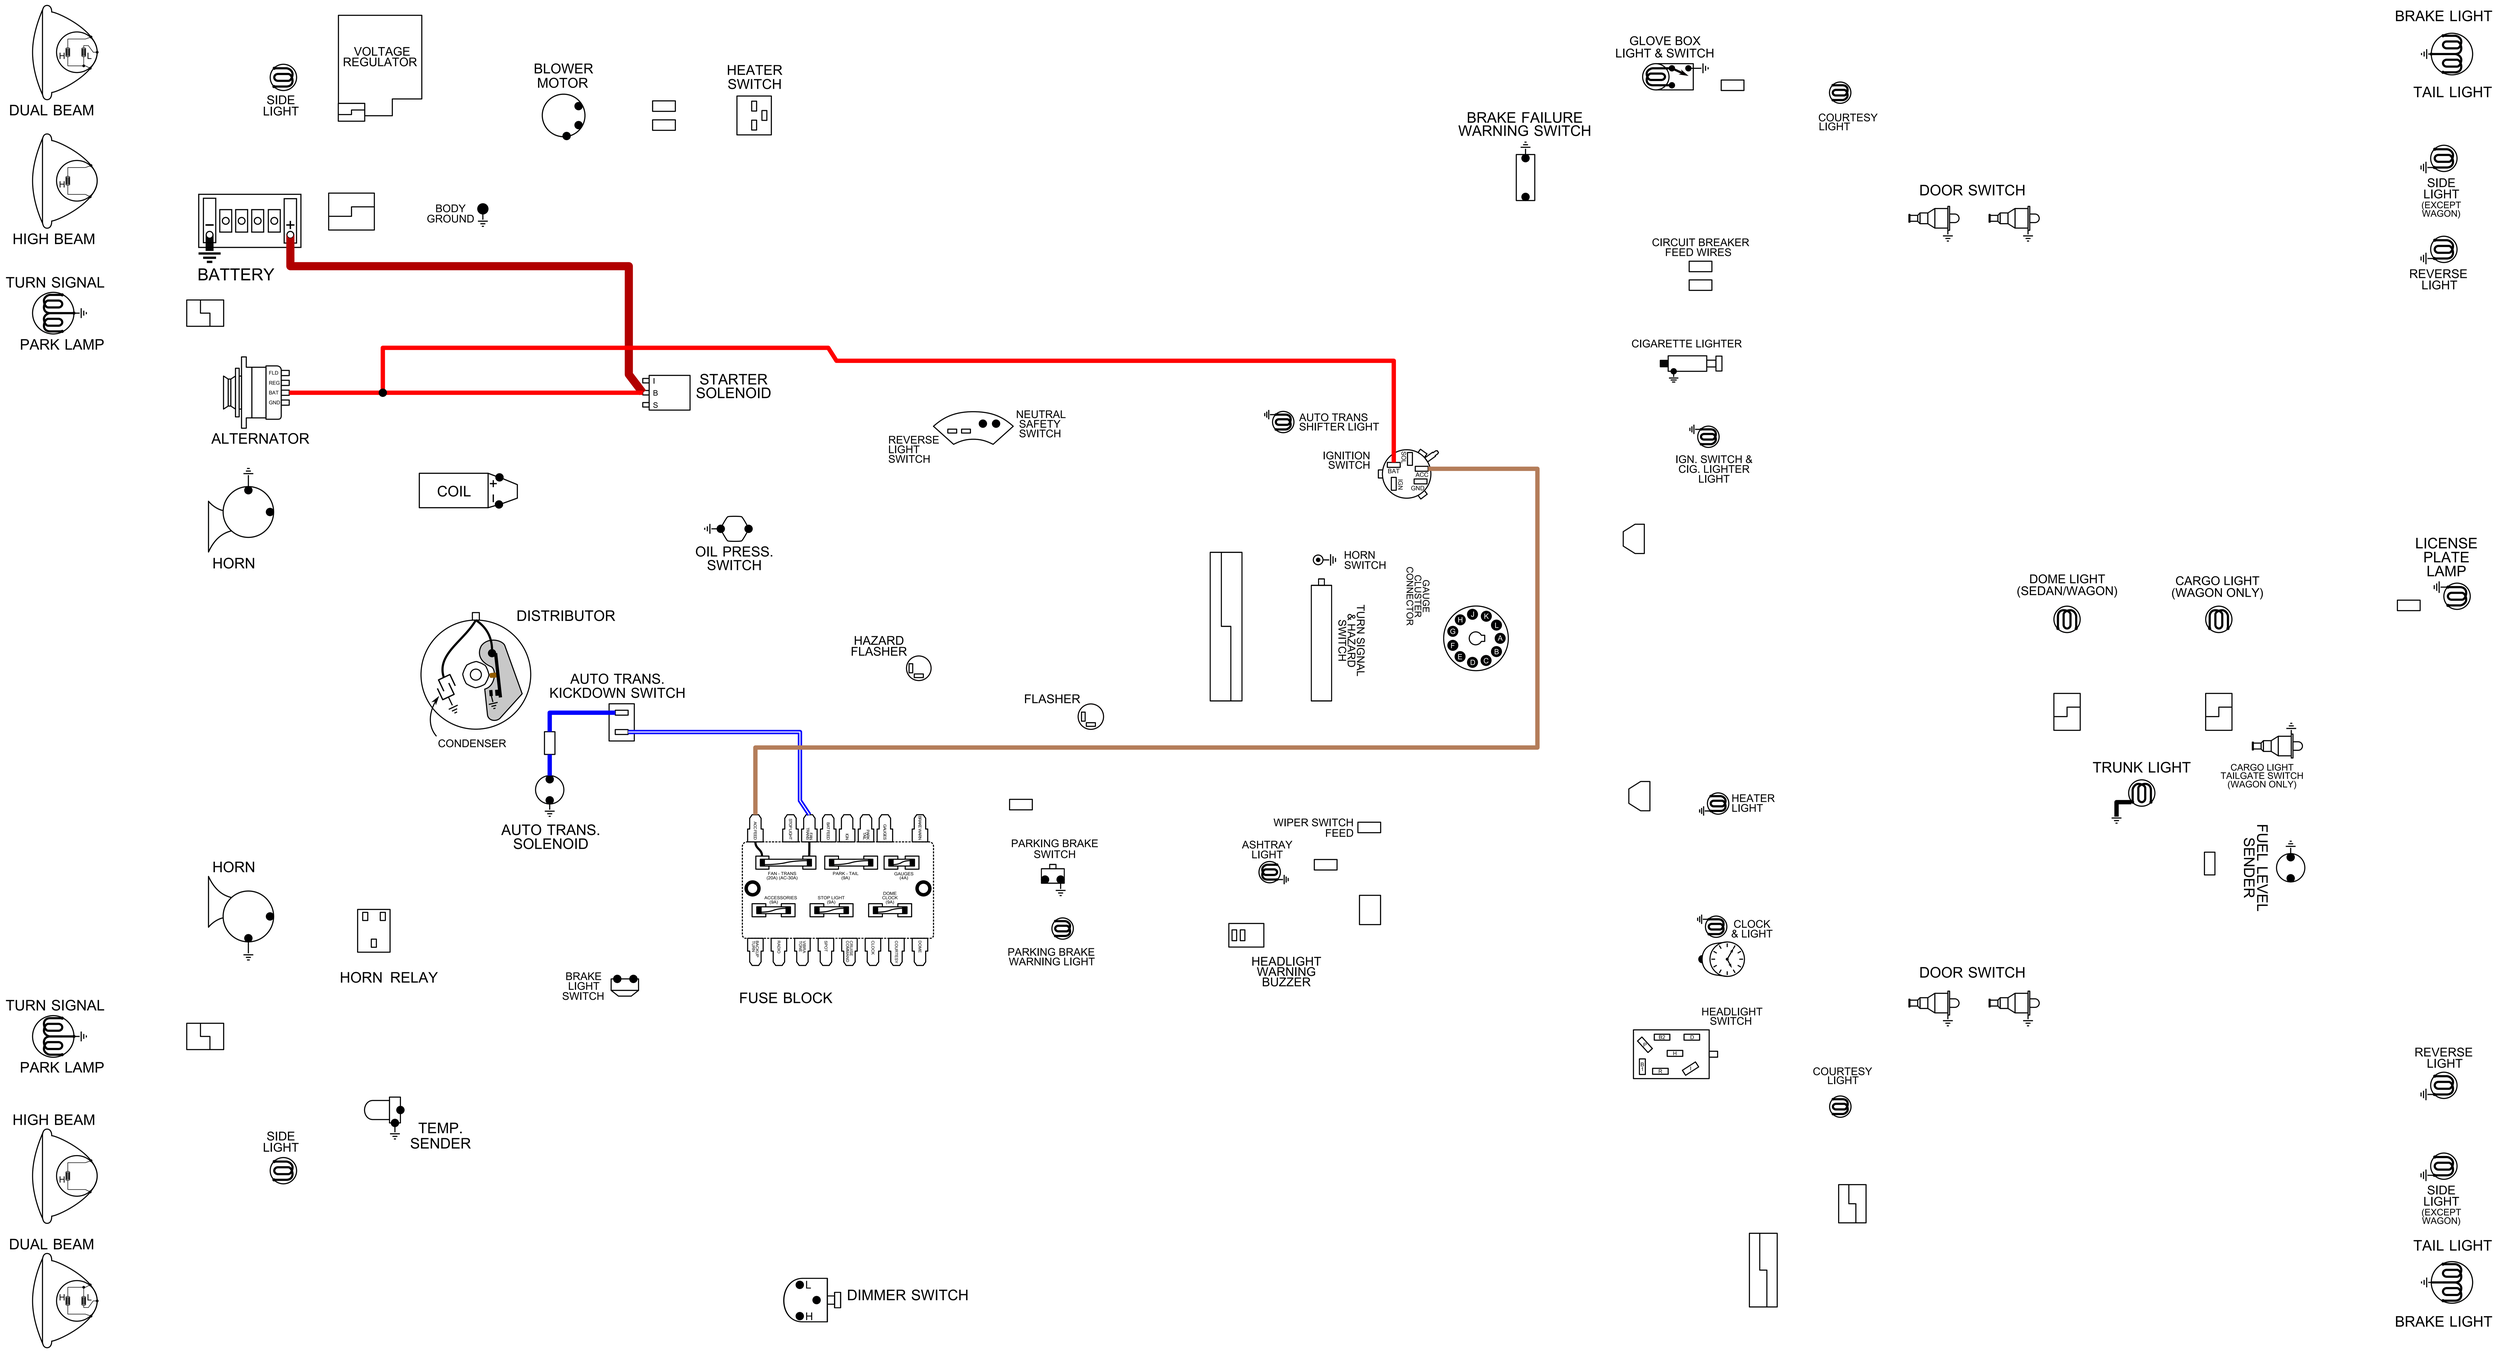

CINCO

1969 AMC AMBASSADOR
GAUGES & WARNING LIGHTS

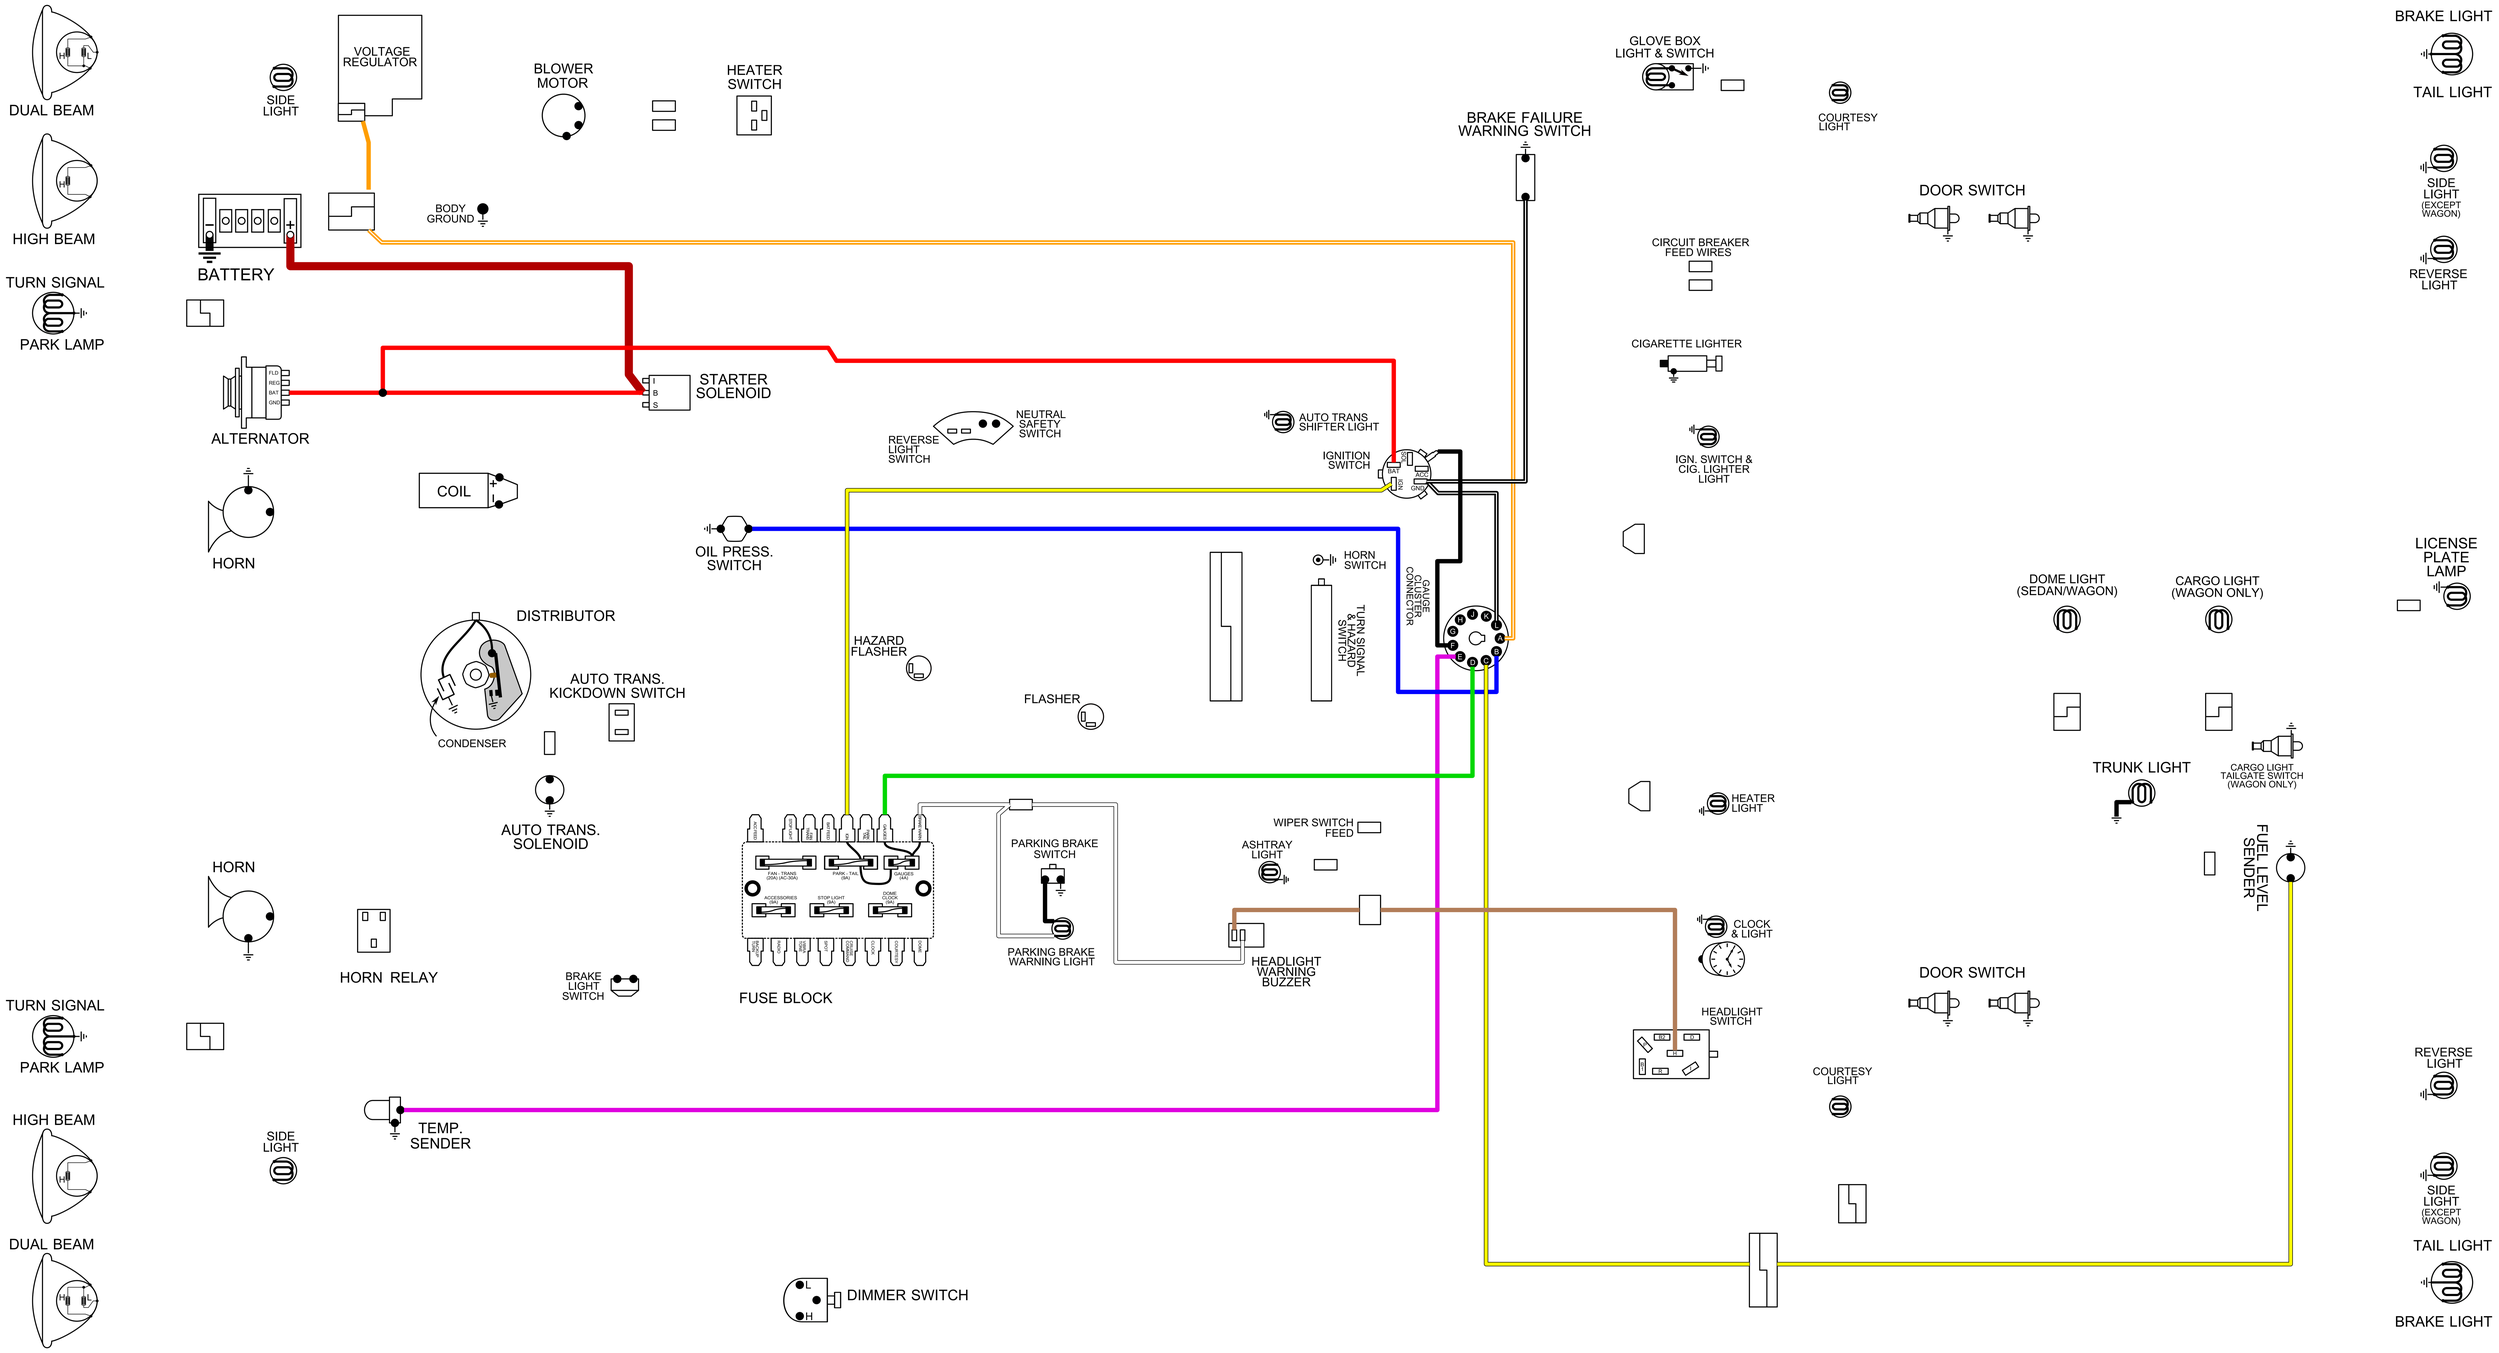

CINCO

1969 AMC AMBASSADOR
REVERSE LIGHTS

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
STARTER SOLENOID
COIL
HORN
OIL PRESS. SWITCH
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
HAZARD FLASHER
FLASHER
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
DOOR SWITCH
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT (EXCEPT WAGON)
REVERSE LIGHT
LICENSE PLATE LAMP
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
TRUNK LIGHT
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
FUEL LEVEL SENDER
HEATER LIGHT
CLOCK & LIGHT
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
REVERSE LIGHT
SIDE LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
ASHTRAY LIGHT
WIPER SWITCH FEED
HEADLIGHT WARNING BUZZER
DIMMER SWITCH
HORN
HORN RELAY
BRAKE LIGHT SWITCH
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER


CINCO

1969 AMC AMBASSADOR
DOME & COURTESY LIGHTS

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
ALTERNATOR
STARTER SOLENOID
COIL
HORN
OIL PRESS. SWITCH
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
HORN
HORN RELAY
BRAKE LIGHT SWITCH
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE LIGHT
TEMP. SENDER
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
HAZARD FLASHER
FLASHER
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
DIMMER SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
GAUGE CLUSTER CONNECTOR
TURN SIGNAL & HAZARD SWITCH
WIPER SWITCH FEED
ASHTRAY LIGHT
HEADLIGHT WARNING BUZZER
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
IGN. SWITCH & CIG. LIGHTER LIGHT
HEATER LIGHT
CLOCK & LIGHT
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
DOME LIGHT (SEDAN/WAGON)
CARGO LIGHT (WAGON ONLY)
CARGO LIGHT TAILGATE SWITCH (WAGON ONLY)
TRUNK LIGHT
FUEL LEVEL SENDER
DOOR SWITCH
BRAKE LIGHT
TAIL LIGHT
SIDE LIGHT (EXCEPT WAGON)
REVERSE LIGHT
LICENSE PLATE LAMP
REVERSE LIGHT
SIDE LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT

CINCO

1969 AMC AMBASSADOR
DASHBOARD PRINTED CIRCUIT BOARD

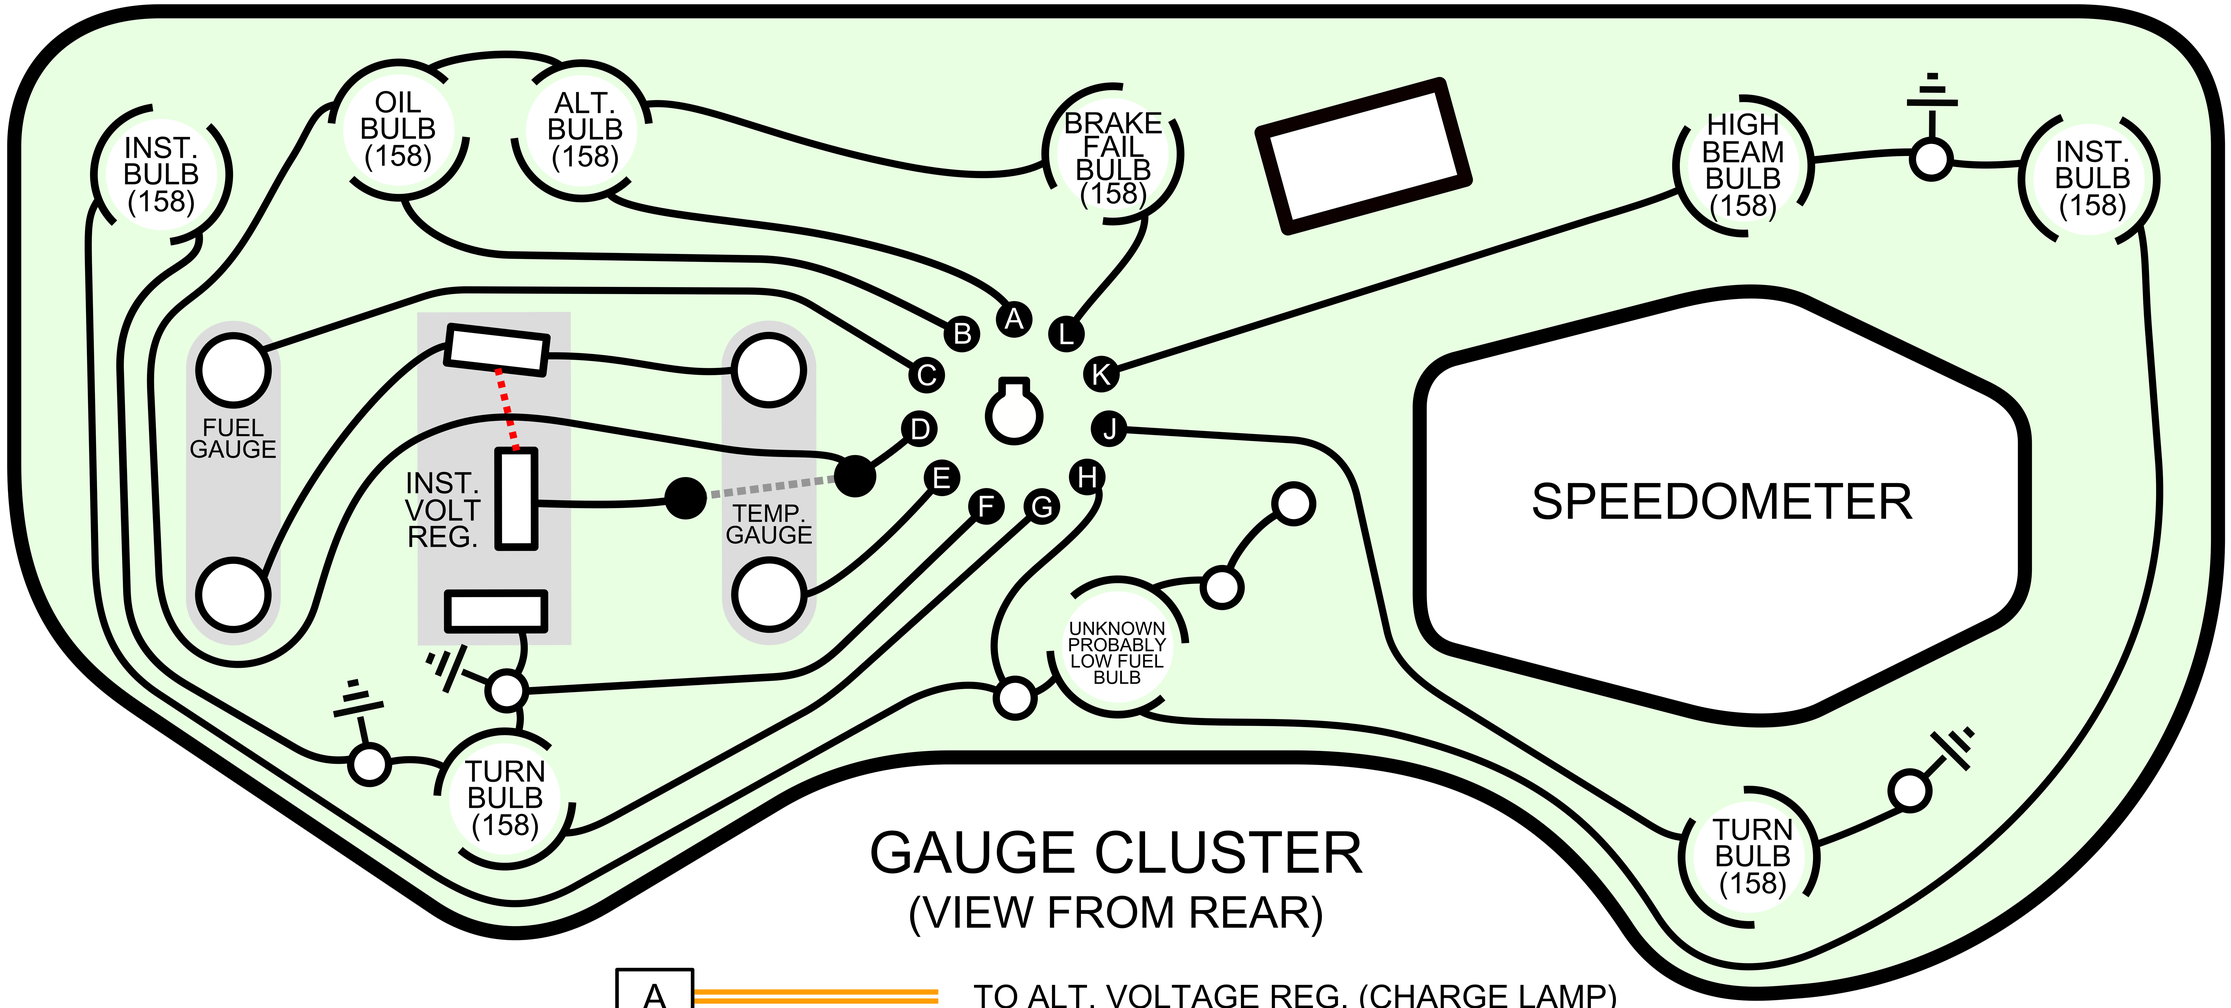

GAUGE CLUSTER
(VIEW FROM REAR)

A	TO ALT. VOLTAGE REG. (CHARGE LAMP)
B	TO OIL PRESS. SWITCH
C	TO FUEL SENDER
D	TO FUSEBOX (POWER FEED)
E	TO TEMP. SENDER
F	TO GROUND
G	TO TURN SIG. SWITCH (RIGHT)
H	TO HEADLIGHT SWITCH (INST. LIGHTS)
J	TO TURN SIG. SWITCH (LEFT)
K	TO DIMMER SWITCH (HIGH BEAM IND.)
L	TO BRAKE FAILURE SWITCH

CINCO